



SurfGate II User Manual

(NTD83Y/Gateway)

NTD83Y-UserI



SyncWave Inc.

Table of Contents

Table of Contents	2
1. Safety Instructions	5
2. Device Introductions	6
3. Device Specifications	11
4. Pre-Boot Preparation	15
5. Initial Setup (WebUI Login)	16
6. LTE (Cellular Network)	17
7. Ethernet Management	18
1. When using Ethernet as LAN	18
2. When using Ethernet as WAN	20
8. Wireless LAN	22
1. Wifi STA (Wireless Client Mode)	22
2. WLAN Basic Settings (Access Point Mode).....	23
3. Wireless MAC Filter	24
9. VPN	25
1. SSTP	25
2. IPSec	27
10. RS485.....	29
1. Modbus RTU connection.....	29
2. Connectivity Device Settings (Pre-installed Devices).....	30
2-1. Pre-installed device settings	30
2-2. List of Pre-installed Devices	30
2-3. Check data of pre-installed devices	30
2-4.CSV output for pre-installed devices	30
3.Connectivity Device Settings (Non Pre-installed Devices)	31
11. I/O Modules	33
1. I/O Layout Diagram.....	33

2.	RS485 connection.....	33
3.	DO Connection.....	34
4.	DO Connection (Signal Conversion).....	34
5.	5V power supply connection.....	34
6.	DI Connection.....	35
7.	AO Connection.....	35
8.	AI Connectivity.....	35
9.	Wired power supply for this device.....	36
12.	LoRaWAN.....	37
1.	Standard LoRaWAN.....	37
2.	LoRaWAN Network Server (LNS).....	38
3.	Configuration and Update Server (CUPS).....	39
13.	EnOcean.....	41
1.	EnOcean Device Manager screen description.....	41
2.	Register from the Unregistered Device list.....	42
3.	Register from Manually Register Device.....	43
4.	Register through Teach-in.....	44
5.	EnOcean Equipment Screen Description.....	45
6.	Add registered sensor into EnOcean Equipment List.....	45
7.	Delete registered sensor.....	46
8.	List of supported EEPs.....	47
9.	List of Supported GPs.....	49
	DAISEN ELECTRONICS INDUSTRIAL.....	49
14.	Modbus TCP.....	50
1.	Modbus TCP connection.....	50
2.	Modus Address Map (EnOcean).....	51
3.	Modus Address Map (Modbus RTU).....	51
15.	FTP/SFTP.....	53

1. FTP Upload	53
2. FTP Gather	54
3. Un_upload List	55
16. MQTT.....	56
17. Cloud Service.....	59
4. Connect to AWS	59
5. Connect to Azure	60
18. Software Updates	62
19. Network Interface	63
20. Revision History	64
21. Information.....	65

1. Safety Instructions

This chapter describes safety precautions.


To use this product safely, please follow instructions below:

- Please adhere to the guidelines provided in this user manual when using the product.
- Do not store, install, or use the product in the following environments:
 - Areas highly affected by vibration and shock.
 - Unstable locations.
 - Places exposed to outdoor elements such as direct sunlight, wind, rain, and water.
 - Environments with temperatures and humidity levels outside the specified range.
 - Locations where humidity fluctuates drastically, leading to condensation or freezing risks.
 - Areas influenced by electric and magnetic fields.
 - Sites prone to strong high-frequency noise, surges, corrosive gases, and dissolved liquids.
- Ensure that the area around the product is not blocked to allow for proper heat dissipation.
- Avoid installing the product near heat-generating equipment.
- Never throw the product into a fire or expose it to excessive heat.
- Do not attempt to disassemble, modify, or repair the product.
- When mounting the product on a DIN rail, ensure that all screws are securely tightened.
- Cease using the product immediately if you notice any abnormal noise, odor, smoke, or excessive heat generation.
- Use caution when installing or removing SIM cards or SD cards; apply only the necessary force.
- Dispose of the device appropriately following local government regulations.

2. Device Introductions


This chapter describes the names and roles of each part.

< Left side / Front >

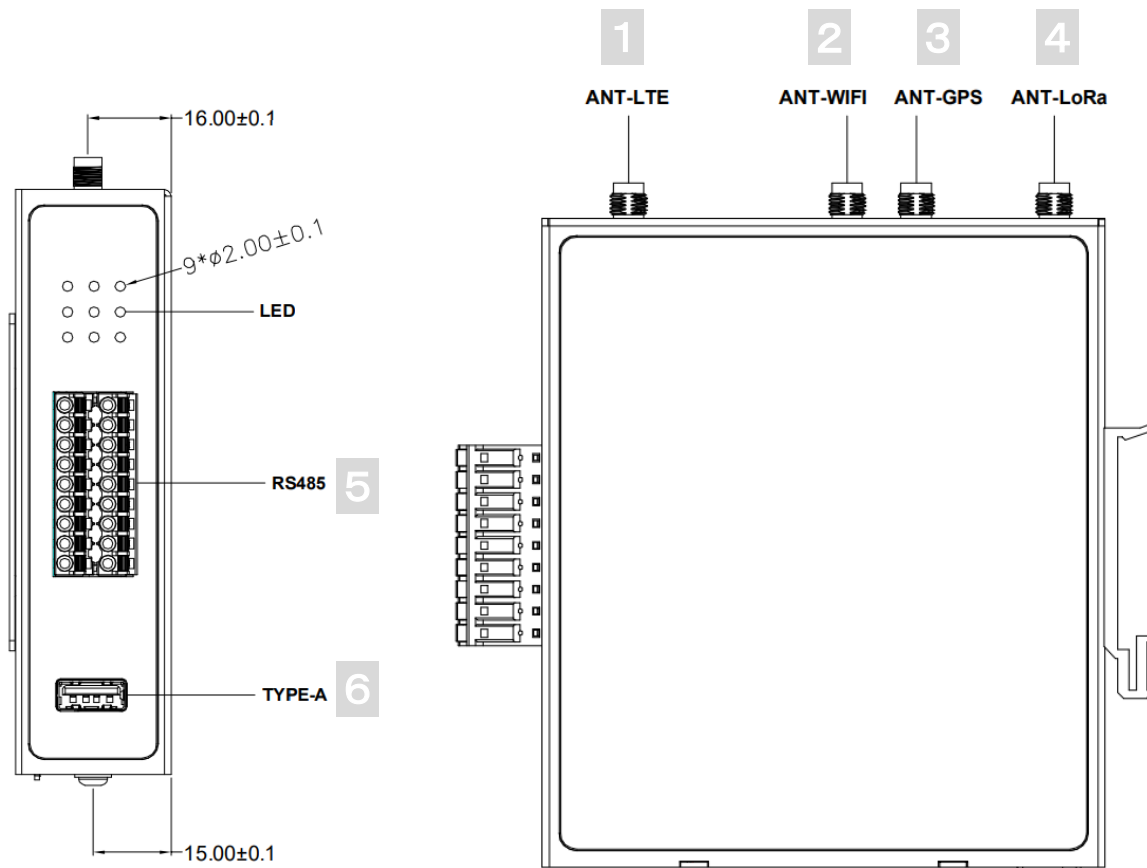


① LTE antenna port	Connection terminal for LTE antennas
② WIFI Antenna Port	Connection terminal for wireless LAN antennas
③ GPS Antenna Port	Connection terminal for GPS
④ LoRa Antenna Port	Connection terminal for LoRa
⑤ I/O, RS485 Port	Interface for I/O, RS485
⑥ USB-A Port	Terminal for connecting a USB device

< Back / Right side >

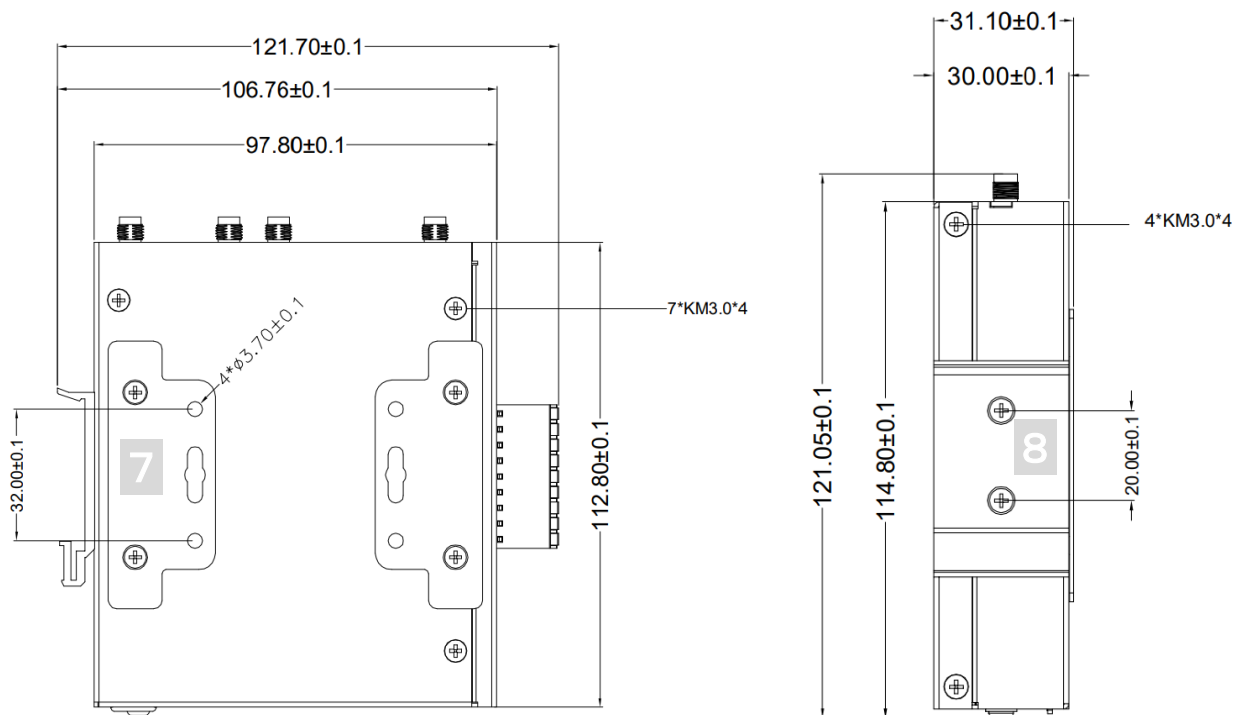


⑦ Mounting bracket	Metal fittings for attaching to a wall, etc. (removable)
⑧ DIN rail bracket	Metal fittings for mounting on the DIN rail (removable)

< Top >

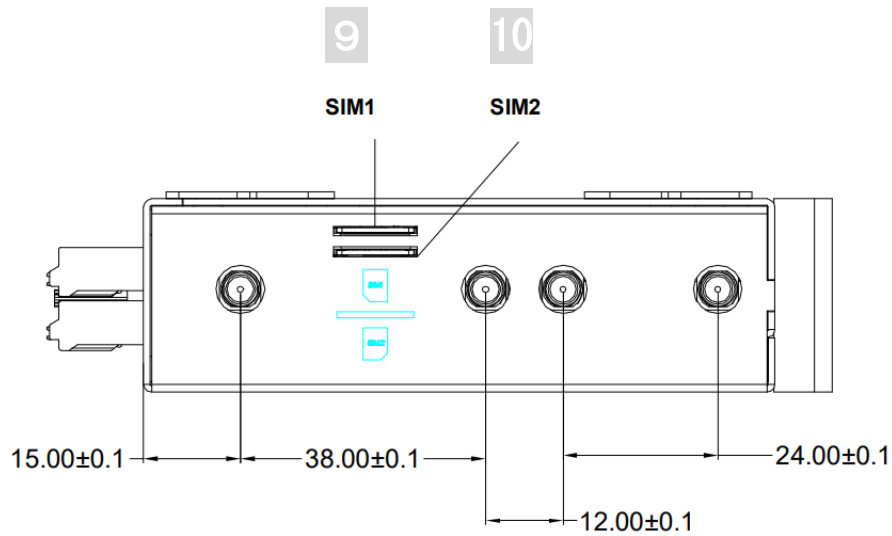

⑨ Primary SIM Slot	Slot to insert Micro SIM (3FF)
⑩ Secondary SIM Slot	Slot to insert Micro SIM (3FF)

< Bottom >

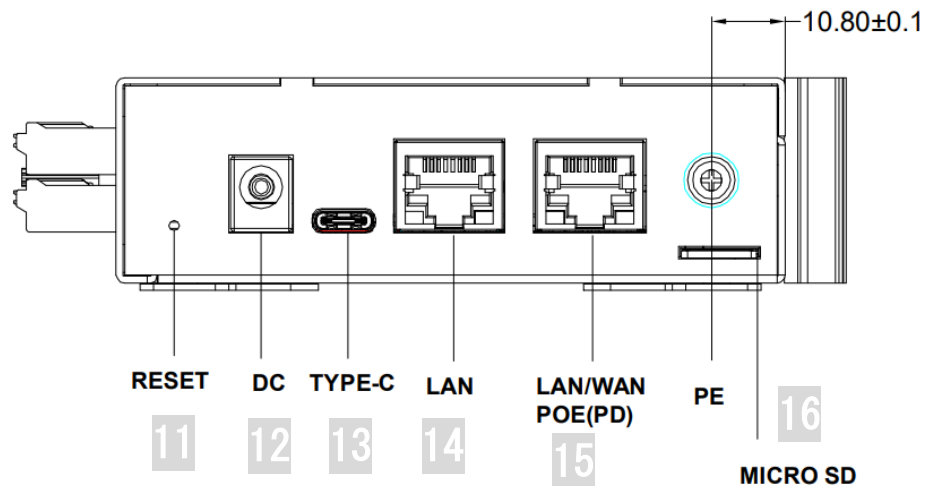


⑪ Reset button	Reset factory default button (press 10 seconds)
⑫ DC power port	Terminal for connecting AC adapter (12V standard)
⑬ USB-C Port	Terminal for connecting USB-Type-C (for configuration)
⑭ Ethernet Port	100BASE-TX
⑮ Ethernet Port (PD)	100BASE-TX (PoE)
⑯ SD Card slot	Slot to insert Micro SD Card

< Attached Antenna >



名称	内容
⑰ General-purpose antenna	Antennas for LTE, WIFI
⑱ Sub-GHz Antenna	Sub-GHz band (920 MHz) antenna for EnOcean / LoRa

LED indicators

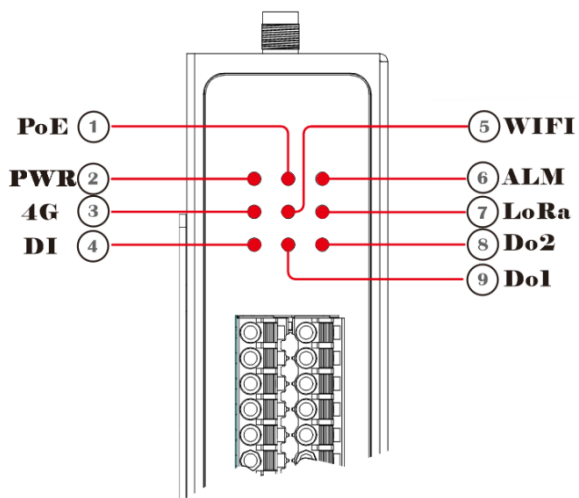

① PoE	Green light on, PoE power supplied
② Power	Green light on, Device Power ON
③ 4G	Green light on, cellular network connected
④ DI	Green light on, digital input more than 3V
⑤ WIFI	Green light on, WIFI connected
⑥ Alarm	Green light on, alarm triggered
⑦ LoRa	Green light blinking, connecting to LoRa cloud; Green light on, LoRa cloud connected
⑧ DO2	Green light, relay activated
⑨ DO1	Green light, relay activated

3. Device Specifications

This chapter describes the product specifications.

Basic Hardware

item	criterion
CPU	DualCore; ARM Cortex-A7 up to 1.2GHz; ARM Cortex-R5
RAM	128MB DDR2
Flash	256MB Nandflash

Cellular Interface

item	criterion
4G	LTE Category 4
Number of antennas	2
Connector	SMA
SIM	Micro SIM ×2 (push-push)
LTE Frequencies	1,3,8,18,19,41

GPS Interface

item	criterion
Number of antennas	1
Connector	SMA
Technology	GPS/GLONASS/BeiDou (Compass) /QZSS

Serial Interface

item	criterion
Type	RS485 × 1 (half duplex or full duplex)
Connector	18PIN (Industry Block, used for DI/DO/AI/AO/AV (analog voltage))
ESD protection	Class 4
Baud rate	2400 bps to 115200 bps

I/O Interface

item	criterion
DI ×1	(Absolute maximum 80V DC, optical coupler isolation)
DO ×1	(NC, COM, NO; 3A 30VDC; 3A 250VAC)
DO ×1	(NO, COM; 1A 30VDC; 0.3A 125VAC)
AI ×1	(0~20mA)
AV ×1	(0~5V)
AO ×1	(0~10V) if 'AO' is not used, it can optionally be set as 'AI'

Wireless Interface

item	criterion
Number of antennas	1
Connector	SMA
Standards	802.11 b/g/n, 1 x 1 MIMO, supports AP and Client modes
Frequency bands	2.412 – 2.484 GHz

EnOcean Interface (Optional)

item	criterion
Number of antennas	1
Standards	928MHz (Japan); 868Mhz (Europe)
Connector	SMA
Sensitivity	-95 dBm
Modulation	FSK
Data rate	125Kbps
MAX Registrable Sensors	100
MAX Monitorable Sensors	24

LoRa Interface (Optional)

item	criterion
Connector	SMA-K with 50 ohms impedance
Gateway IC	SX1302/1303
Standards	LoRaWAN, Class A/B/C 920-928 MHz (Japan) 915-927 MHz (Australia) 902-928 MHz (North America)
Max transmitted power	+28dBm (MAX)
Max sensitivity	-138 dBm @SF12/BW125KHz (MAX)
Reception capacity	Supports 8 channels, each capable of simultaneous data reception, with a 1 MHz bandwidth demodulation
LBT	Supported

Ethernet Interface

item	criterion
Number of ports	2
Standards	10/100 Mbps × 2 (LAN and WAN/LAN); PoE (PD) × 1, IEEE 802.3at
Magnet isolation protection	1.5 KV

Others

item	criterion
SD	Micro SD (Max 128GB)
Reset button	1
USB	USB 2.0 (host) × 1, Type A, 5V 500mA
LED indicators	up: PoE, Run, ALM mid: LTE, WiFi, LoRa / EnOcean down: DI, DO1, DO2
Watchdog	built-in hardware watchdog

Software

item	criterion
OS	Linux OpenWRT
Network Protocols	PPP, PPPoE, TCP, UDP, MQTT(s), DHCP, ICMP, NAT, HTTP(s), DNS, NTP, SMTP, ARP, NTP, SMTP, Telnet, DDNS, etc.
Industrial Protocols	Modbus RTU, Modbus TCP, BACnet IP※
VPN	OpenVPN, SSTP, IPsec
Firewall	DMZ, anti-DoS, Filtering (IP/Domain name/MAC address), Port Mapping, Access Control
Remote management	SurfView remote management system, WebUI, SSH

Cloud Connection

item	criterion
Type	AWS, Azure, Cumulocity

Power Supply and Consumption

item	criterion
Connector	DC-Jack; 3-pin terminator
Input voltage	9 ~ 36V DC
Power consumption	Idle: 1W Data link: 5W (peak)

Physical Characteristics

item	criterion
Dimensions	113×98×30mm
Weight	320g
Housing	Metal
Ingress protection	IP30
Installations	Desktop, wall mounting and 35mm DIN rail mounting
Operating temperature	-30 ~ +70 °C

Storage temperature	-40 ~ +85 °C
---------------------	--------------

※under development

Certification

item	criterion
Japan	Telec/Jate

Regulatory

item	criterion
EMI	EN55032 CE, Class B
EMS	IEC61000-4-2 ESD, Level 4 IEC61000-4-4 EFT, Class B IEC61000-4-5 SURGE, Level 4 IEC61000-4-6 CS, Class A IEC61000-4-11 DIP, Class C298g
Vibration	IEC60068-2-6
Shock	IEC60068-2-27

4. Pre-Boot Preparation

This chapter describes the preparations before startup.

- Install the Antenna

When using the wireless function, attach an antenna to each port corresponding to the intended function. Ensure that the antenna is firmly attached to prevent any rotation, as this can affect antenna sensitivity.

- Insert SIM card

Insert the SIM card following the orientation indicated on the product label. Pay close attention to the direction in which the SIM is inserted. Inserting it forcibly may result in difficulty removing it. Ensure the device is powered off before inserting the SIM; otherwise, it will not be recognized. If you do not intend to use the cellular network, there's no need to insert the SIM card.

Insert the SIM card in the orientation indicated on the product label.

- Insert SD card

Insert the SD card following the orientation indicated on the product label. Take care to align the insertion direction properly. Forcing the SD card may make it difficult to remove. Ensure the device is powered off before inserting the SD card to prevent recognition issues. If you do not plan to use an SD card, there's no need to insert it.

- Plug the AC adapter


Plug the included AC adapter to the power terminal of this product and plug it into an electrical outlet.

- When plugged into an outlet, the power is turned on automatically.
- Remember to unplug the adapter from the outlet when finished to turn off the power.
- Please note that as a countermeasure against power outages, the product may continue to run for a short while after the power is turned off.

5. Initial Setup (WebUI Login)

This chapter describes the procedure for logging in to the WebUI.

1. Insert SIM Card.
 - * Pay attention to the direction when inserting the SIM card.
 - * Ensure the power is off before inserting the SIM card, as it will not be recognized if inserted while the power is on.
 - * If you do not intend to use the cellular network, there's no need to insert the SIM card.
2. Plug the AC adapter that came with this product into an electrical outlet.
3. Start your computer.
4. Connect the USB-C port of this product to the USB port of the computer with a USB cable.
5. Launch a web browser on your computer.
6. Enter the following URL in the address bar.
192.168.1.1
7. When the login screen is displayed, enter the following login information.

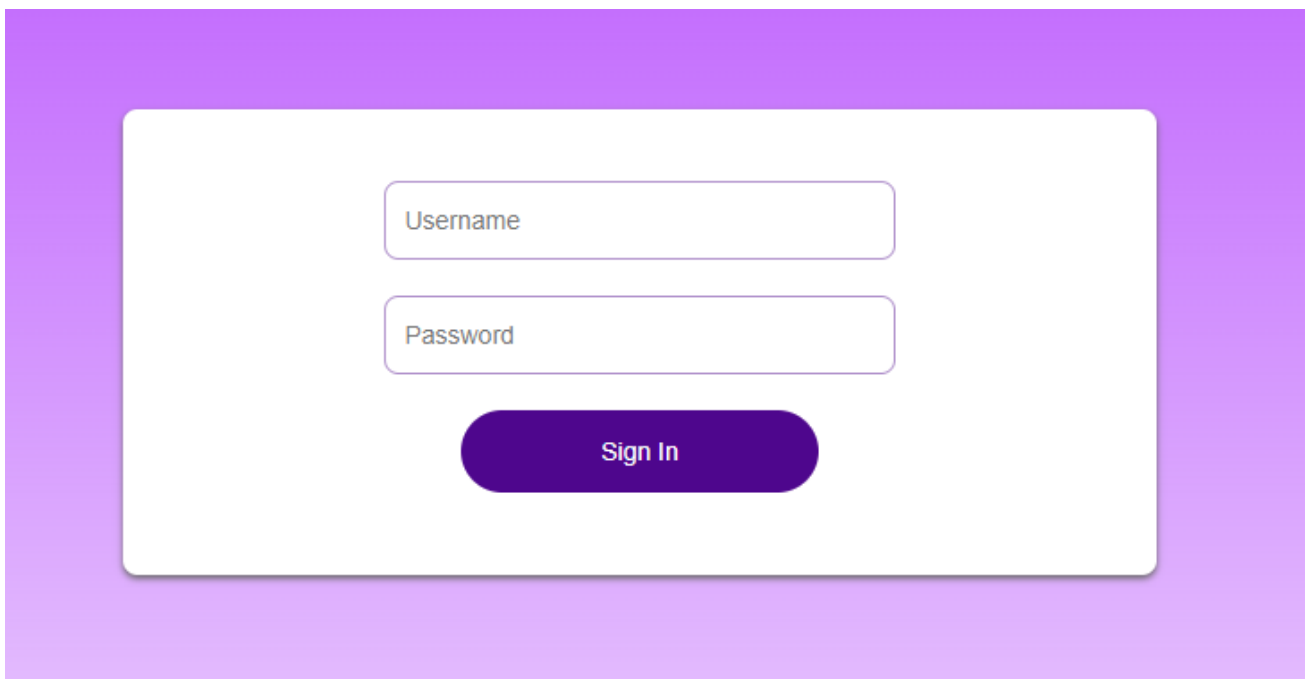

>Username: admin

>Password: admin


*It may take some time to display immediately after starting this product, so if you cannot connect, wait for a while and then connect again.

8. The login is completed and the dashboard is displayed.


6. LTE (Cellular Network)

This chapter describes the LTE connection procedure.

1. Select [Internet] from the main menu.
2. Select [APN Management] from the side menu.

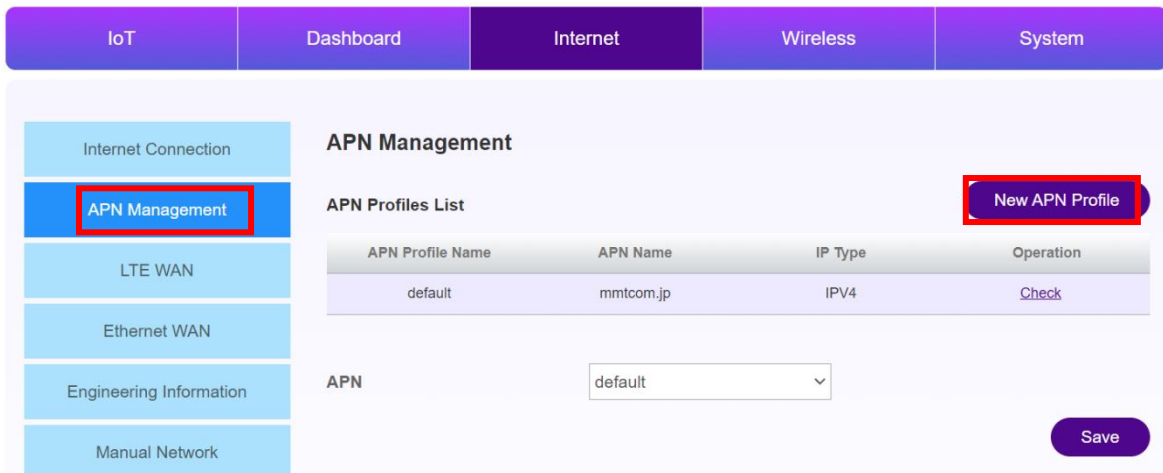

3. Click [New APN Profile] to set the APN information of the inserted SIM.

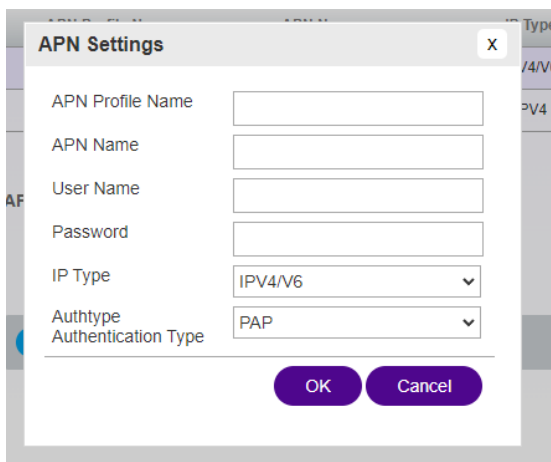

4. Select [OK].
5. Select the APN Profile you created from the APN drop-down menu .




6. Click [Save].

7. Ethernet Management


This chapter describes the Ethernet Management procedure.

1. When using Ethernet as LAN

1. Select [Internet] from the main menu.
2. Select [Ethernet Management] from the side menu.
3. Click [Edit] from the Ethernet Management.

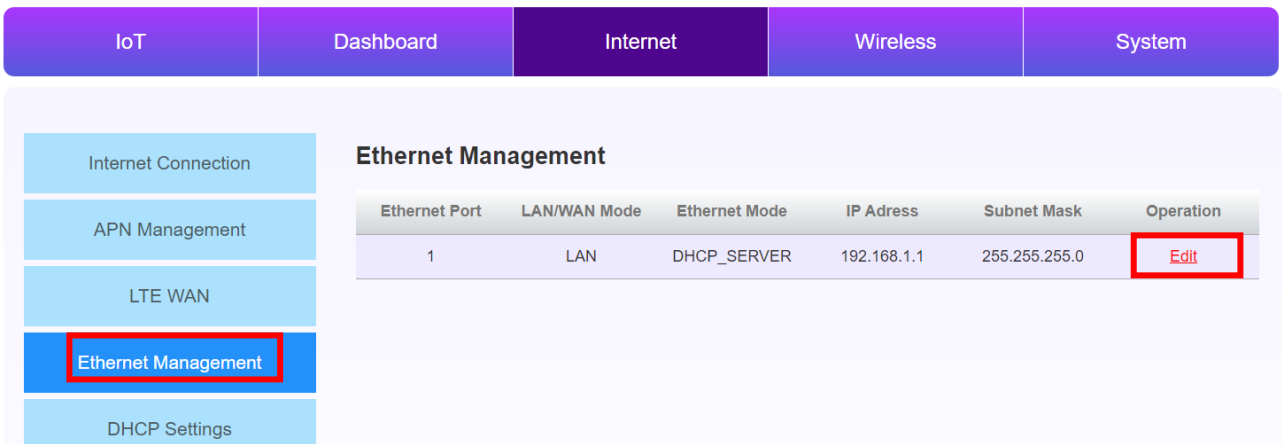

4. Enter the following from the Ethernet Management.

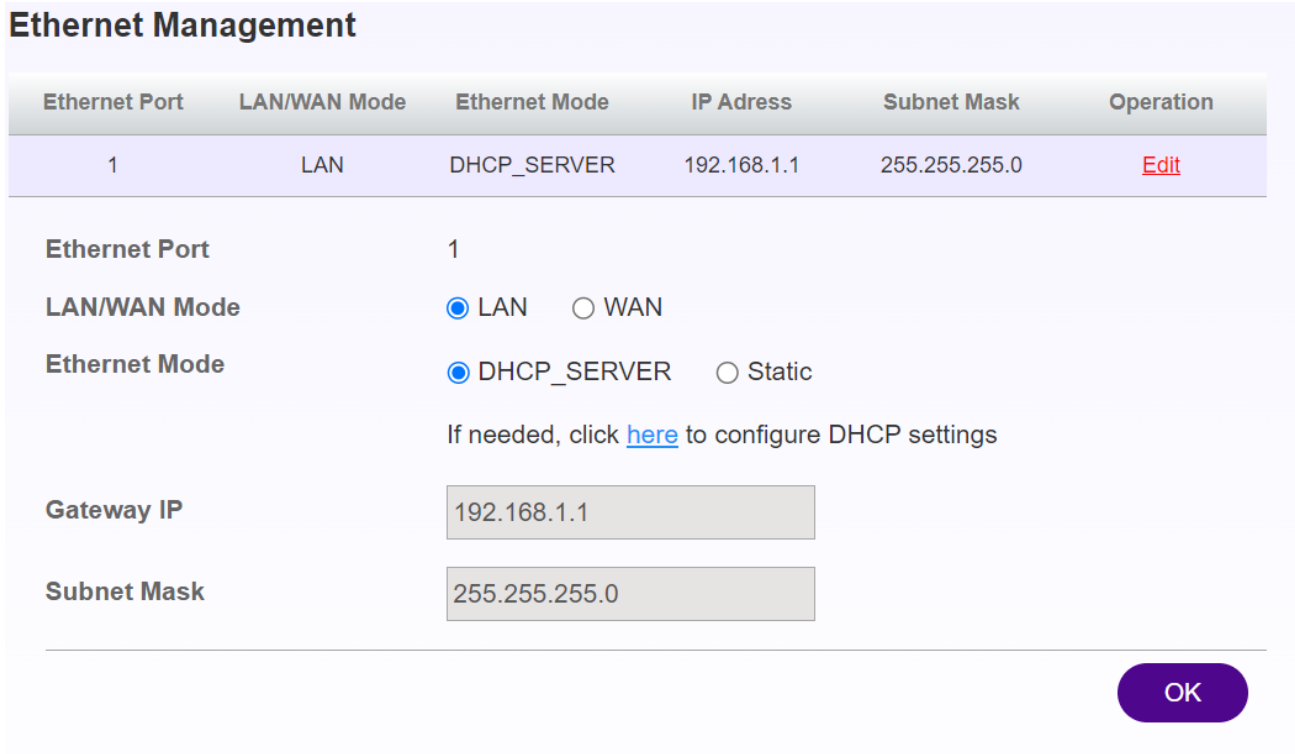

-LAN/WAN Mode: In the case of LAN

-Ethernet Mode: DHCP_SERVER

The connected device is automatically assigned an IP address by DHCP.

-Gateway IP : DHCP Default Gateway in Setting IP (cannot be changed)

-Subnet Mask: Subnet Mask of DHCP Setting (cannot be changed)

-Ethernet Mode: Static case

Any IP address and subnet mask can be assigned to the Ethernet port. It is not possible to assign the same settings as the segments assigned by DHCP Settings.

-LAN IP: Any IP address


- Subnet Mask: Arbitrary Subnet Mask

5. Click the OK button.


*For more information about interfaces, see chapter Network Interface.

2. When using Ethernet as WAN

1. Select [Internet] from the main menu.
2. Select [Ethernet Management] from the side menu.
3. Click [Edit] from the Ethernet Management.

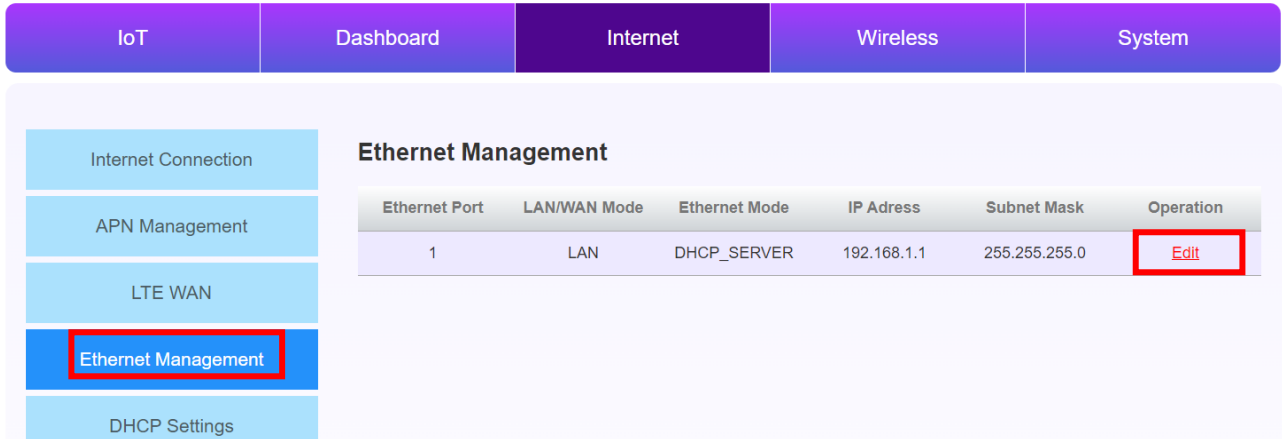

4. Enter the following from the Ethernet Management.

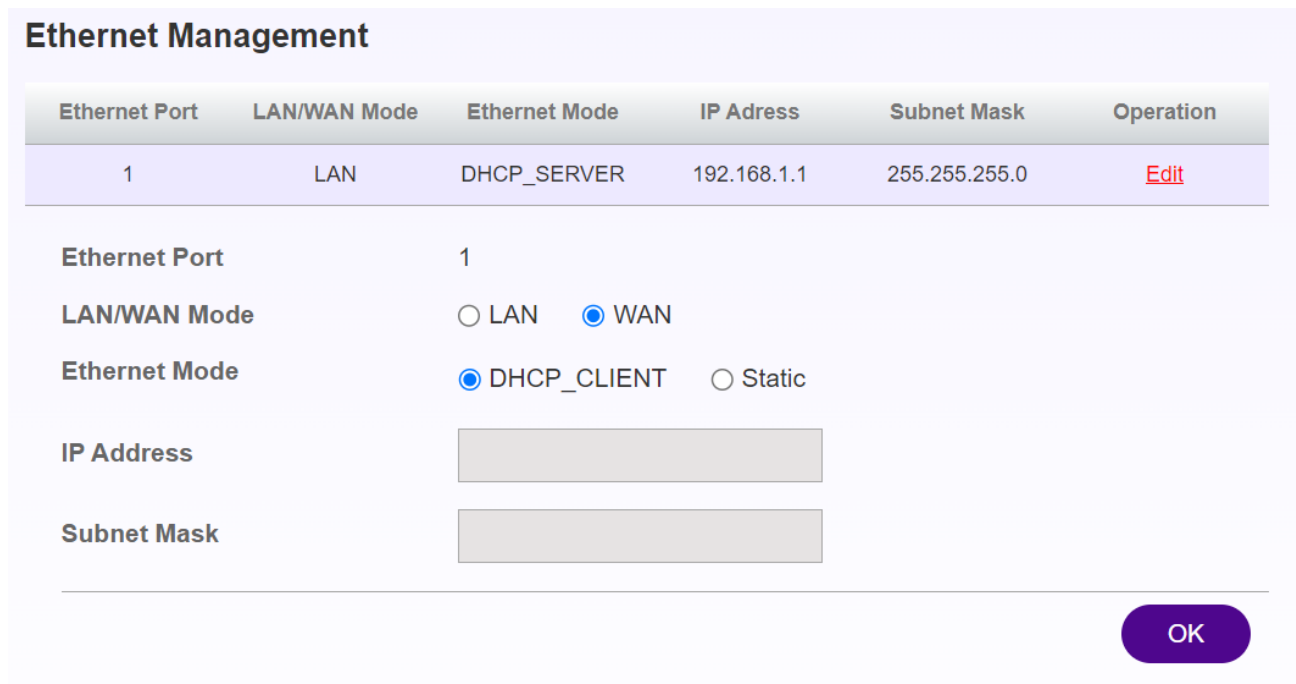

-LAN/WAN Mode: In the case of WAN

-Ethernet Mode : DHCP_CLIENT

An IP address can be automatically assigned by DHCP from the opposing device.

-IP Address: Auto-assigned/cannot be changed

-Subnet Mask: Auto-assigned/cannot be changed

-Ethernet Mode : Static

Assign an arbitrary IP address and Subnet Mask to the Ethernet port.

-WAN IP: Any IP address

-Subnet Mask: Any Subnet Mask

-Gateway IP: Gateway IP address of the network to be connected

-DNS1 (optional): Any DNS server address (primary)

-DNS2 (optional): Any DNS server address (secondary)

5. Click the OK button.

*For more information about interfaces, see chapter Network Interface.

8. Wireless LAN

This chapter describes the procedure for setting up a wireless LAN.

1. Wifi STA (Wireless Client Mode)

1. Log in to the WebUI and select [Wireless] from the main menu.
2. Select [Wifi STA] from the side menu.
3. Enter the following from the Wifi STA.

The screenshot shows the WebUI configuration page for Wifi STA. The top navigation bar includes 'IoT', 'Dashboard', 'Internet', 'Wireless', and 'System'. The left sidebar lists 'Wifi STA', 'WLAN Basic Settings', 'WLAN Advanced Settings', and 'Wireless MAC Filter'. The main content area is titled 'Wifi STA' and contains the following configuration options:

- Wifi STA Status:** Radio buttons for 'Enabled' and 'Disabled' (selected).
- Information:**
 - SSID:** Text input field.
 - Security Type:** Dropdown menu set to 'WPA2-PSK'.
 - Wi-Fi Password:** Text input field.
 - Show Password:** Checkbox.

An 'OK' button is located at the bottom right of the configuration area.

-Wifi STA Status: Enabled / Disabled

-SSID: SSID of the connection destination

- Security Type: Security Type of the connection destination - Wi-Fi Password: Wi-Fi Password of the connected Access Point

4. Select [OK].

2. WLAN Basic Settings (Access Point Mode)

1. Log in to the WebUI and select [Wireless] from the main menu.
2. Select WLAN Basic Settings from the side menu.
3. Enter the following from the WLAN Basic Settings.

WLAN Basic Settings

- If the security type is set to WEP, wireless network adapters that only operate in 802.11n mode may not be able to access the device.

WiFi Status Enabled Disabled

Working Band 2.4GHz

SSID DTU_MD83X_A42F

Security Type WPA2-PSK

Wi-Fi Password

Show Password

SSID Broadcast Enabled Disabled

Note: If the SSID broadcast is turned off, the customer must enter the correct SSID to connect to the WLAN. For more information, please refer to the help.

AP Isolate Switch Disabled

OK Cancel

-Wi-Fi Status: Enabled / Disabled

-SSID: Any Name

-Security Type: Any Security Type

-Wi-Fi Password: Any Wi-Fi


Password-SSID Broadcast: Enabled (If you want to publish the SSID) / Disabled (if you do not want to expose the SSID)

- AP Isolate Switch: Disabled (do not block communication between wireless clients) / Enabled (block communication between wireless clients)

4. Select [OK].

3. Wireless MAC Filter

1. Log in to the WebUI and select [Wireless] from the main menu.
2. Select [Wireless MAC Filter] from the side menu.
3. Select the following mode from MAC Filtering Mode, and then select [Save].
 - Disable: To disable
 - Allow: Specify the MAC address of the device to be allowed
 - Deny: Specify the MAC address of the device that is not allowed
4. Select the [Add] button.
5. On the Add MAC Filter Address screen, enter the MAC address of the device and select [Save].

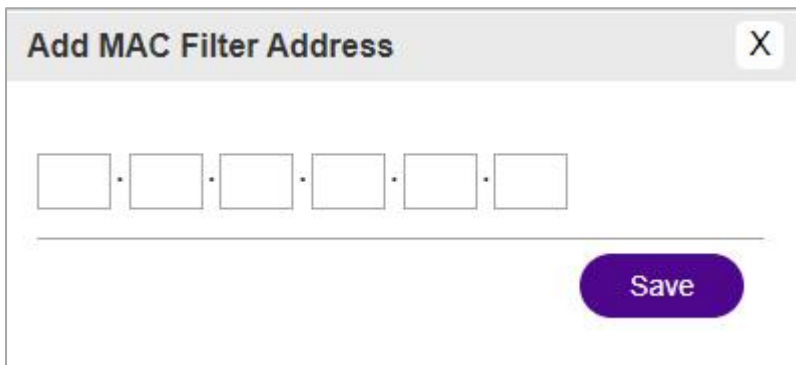


The screenshot shows a dialog box titled "Add MAC Filter Address" with a close button (X) in the top right corner. The main area of the dialog contains a form for entering a MAC address, consisting of six input boxes separated by dots. Below the form is a purple "Save" button.

9. VPN


This chapter describes the procedure for setting up a VPN.

1. SSTP

1. Log in to the WebUI and select [System] from the main menu.
2. Select SSTP from the Protocol pull-down menu.

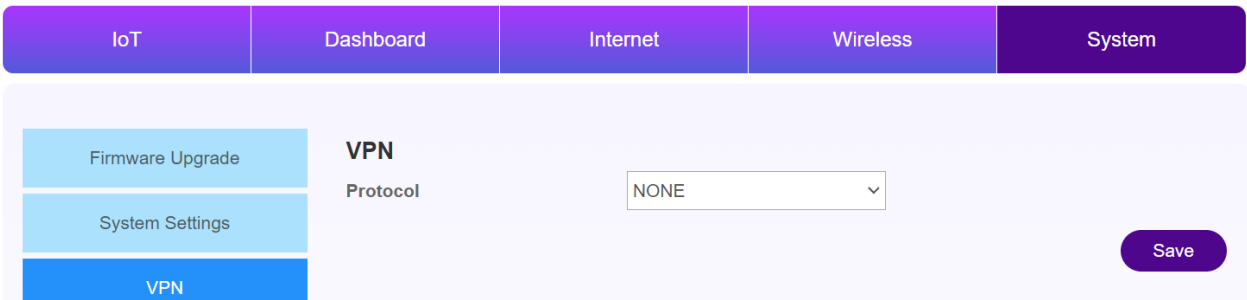

3. Select SSTP from the Protocol pull-down menu.
4. Set the following:

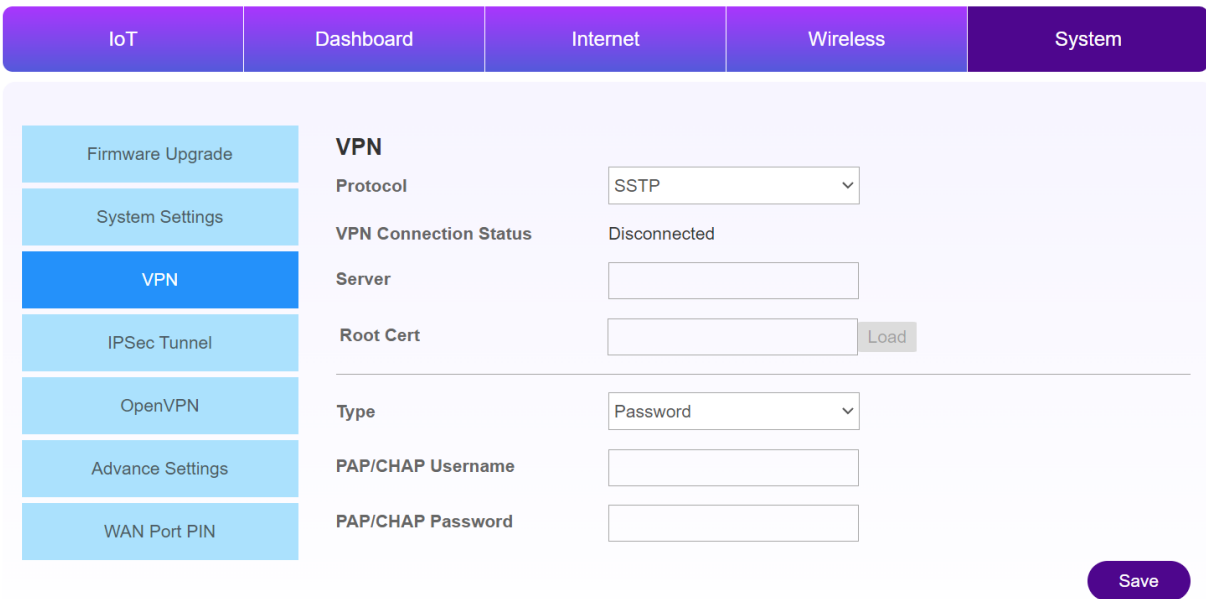

-Server: VPN server address to connect to


-Root Cert: Set the certificate of the VPN you want to connect to, and press [Load].

-Type:

- Password: Password method
- Certificates(TLS): Certificate method

-Enter the PAP/CHAP Username: (password method) username

- Enter the PAP/CHAP Password: (password method) password
 - User certificate :(certificate method) Set the certificate and press [Load].
 - User private key: (Certificate method) Select Private Key and press [Load].
5. Click the [Save] button.
 6. When the VPN Connection Status becomes Connected, the connection is complete.
 7. Select [Dashboard] from the menu of WebUI.
 8. The VPN information is displayed in the VPN section.

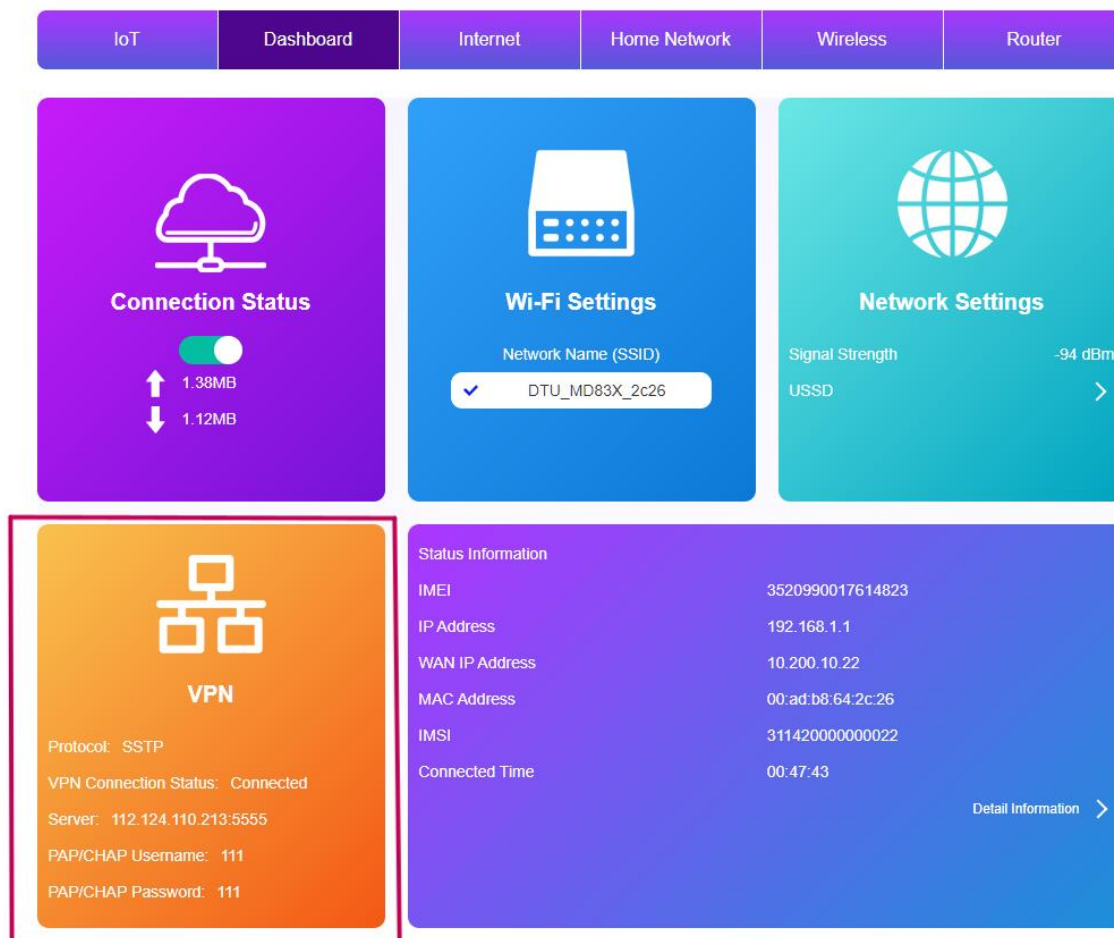

2. IPSec

1. Log in to the WebUI and select [System] from the main menu.
2. Select the IPSec Tunnel menu.
3. Set the following:

The screenshot shows the 'IPSec Tunnel' configuration page. The top navigation bar includes 'IoT', 'Dashboard', 'Internet', 'Wireless', and 'System'. The left sidebar lists 'Firmware Upgrade', 'System Settings', 'VPN', 'IPSec Tunnel', 'OpenVPN', 'Advance Settings', and 'WAN Port PING'. The main configuration area is titled 'IPSec Tunnel' and includes the following settings:

- IPSec Switch:** Enabled
- IPSec Connection Status:** Disconnected
- IPSec Mode:** Tunnel
- Remote Address:** 0.0.0.0
- DPD Delay(sec):** 30
- Key Exchange Mode:** ikev2
- Local Subnets:** 0.0.0.0/0
- Remote Subnets:** 0.0.0.0/0
- Phase #1:** Lifetime 3600
- Phase #2:** Lifetime 3600
- IKE Encryption:** aes128
- ESP Encryption:** aes128
- IKE Hash:** sha1
- ESP Hash:** sha1
- DH Group:** modp1024
- PFS Group:** none
- Authentication Method:** psk
- Pre-Shared Key:** ****

A 'Show Password' checkbox is located below the Pre-Shared Key field. A 'Save' button is positioned at the bottom right of the configuration area.

-IPSec Switch: Enabled/Disabled VPN server address

-IPSec Connection Status - Displays the status of the connection with the IPSec server

-IPSec Mode: Select from Tunnel/Transport

-Remote Address: Enter the address of the IPSec server.

-DPD Delay (sec): DPD (Dead Peer Detection), IPsec tunnel communication interruption in real time

Set the time period to be detected (same effect as Heartbeat)

- Key Exchange Mode: Select from ikev1 / ikev2
- Local Subnets: Enter the addresses of local subnets protected by IPsec
- Remote Subnets: Enter the addresses of remote subnets protected by IPsec

Phase # 1 (Security Association Phase1)

- Lifetime: Enter the survivable time of Phase 1
- IKE Encryption: Select encryption algorithm from aes128 / aes192 / aes256 / 3des
- IKE Hash: Select authentication algorithm from sha1 / sha256 / sha384 / sha512 / md5
- DH Group: Select DH Group.

Phase # 2 (Security Association Phase2)

- Lifetime: Enter the survivable time of Phase 2
- ESP Encryption: Select encryption algorithm from aes128 / aes192 / aes256 / 3des
- ESP Hash: Select authentication algorithm from sha1 / sha256 / sha384 / sha512 / md5
- PFS Group: Select PFS Group.

- Authentication Method: Authentication method, fixed by psk (Pre-shared Key)
- Enter the Pre-Shared Key: psk password

4. Click the [Save] button.
5. When the IPsec Connection Status becomes Connected, the connection is complete.

10. RS485

This chapter describes the procedures related to RS485.

1. Modbus RTU connection

1. Connect the target device to this product via RS485.
2. Log in to the WebUI and select [IoT] from the main menu.
3. Select [RS485/232] from the menu.
4. Use Modbus Setting to set the communication according to the target device.

IoT > RS485/232

Modbus Setting | Modbus List | Profile List

CSV Convert: Start Stop

Modbus Setting

- * Switch: Enabled
- * CRC: Enabled
- * Mode: Master
- * Parity: NONE
- * Serial type: RS485
- * Baud rate: 9600
- * Data Bits: 8
- * Stop Bits: 1
- * Acquisition Cycle: 1min
- * Timeout: 50 ms

Save

- CSV Convert Select: Stop/Start (leave it as Stop in the procedure)
- Switch: Enabled/Select Disabled (Select Enabled when using RTU)
- CRC: Enabled/Select Disabled (If you want to use CRC, select Enabled.)
- Mode: Master fixed (cannot be changed / Slave will be supported in the future)
- Parity: Select according to the settings of the target device
- Serial Type: RS485
- Baud rate: Select according to the settings of the target device

- Stop Bits: Select according to the settings of the target device
- Acquisition Cycle: Select the data acquisition interval
- Timeout: maximum acquisition time

5. Press the [Seve] button.

2. Connectivity Device Settings (Pre-installed Devices)

2-1. Pre-installed device settings

1. Select [Modbus List] from the menu.
2. Click [Add].
3. Register the target device.

- Name: Enter the name
- Salve Id: Enter the slave ID of the target device.
- Profile: Specify the profile of the target device (Default if there is none)

4. [Click OK.

2-2. List of Pre-installed Devices

By selecting a pre-installed device, you do not need to set up details.

brand	name	Model No.
OMRON	Power Usage Logger	Model KM-N1-FLK

2-3. Check data of pre-installed devices

For pre-installed devices, you can check the values on the WebUI.

1. Select [Profile List] from the menu.
2. Select the target device from Select Profile.
3. It is possible to check the acquired data.

2-4.CSV output for pre-installed devices

For pre-installed devices, CSV output of acquired data is possible.

1. After the settings of the pre-installed device are completed
2. Select [Modbus Setting] from the menu.
3. Select Start from CSV Convert
4. Click [OK].
5. CSV output is completed.

IoT > RS485/232

Modbus Setting | Modbus List | Profile List

CSV Convert: Start Stop

Modbus Setting

- * Switch: Enabled
- * CRC: Enabled
- * Mode: Master
- * Parity: NONE
- * Serial type: RS485
- * Baud rate: 9600
- * Data Bits: 8
- * Stop Bits: 1
- * Acquisition Cycle: 1min
- * Timeout: 50 ms

Save

3.Connectivity Device Settings (Non Pre-installed Devices)

For devices that not in pre-installed devices list, please do settings manually.

1. Click on the Slave Id link

IoT > RS485/232

Modbus Setting | **Modbus List** | Profile List

List of Slaves

Add

No.	Name	Slave Id	Profile	Operation
1	N1	1	KM-N1-FLK	Edit Del

List of Variable

Slave Id: 1 Add

No.	Name	Start Address	Register/Bits	Read/Write	Value	Response	Operation
-----	------	---------------	---------------	------------	-------	----------	-----------

2. Click the [Add] button from the List of Variable screen on the right.

3. Configure the settings from Add Variable window.

- Name of Variable: Enter the name
- Unit: Enter the unit
- Function Code: Select function code
- Start Address (Hexadecimal): Enter the start address
- Number of Bits: Number of bits
- Read/Write: Select only Read or only Write

4. Click [OK].

IoT > Modbus-RTU

Modbus Setting | **Modbus List** | Profile List

List of Slaves

[Add](#)

No.	Name	Slave Id	Profile	Operation
1	test	1	default	Edit Del

List of Variable

Slave Id: 1 [Add](#)


No.	Name	Start Address	Register/Bits	Read/Write	Value	Response	Operation
1	test	0001	1	Only read	0.01	-	Edit Del
2	test2	0002	1	Only write	0000	writing	Edit Del

The acquired data is displayed in the Value field.


11. I/O Modules

This chapter describes the configuration of the I/O module.


1. I/O Layout Diagram

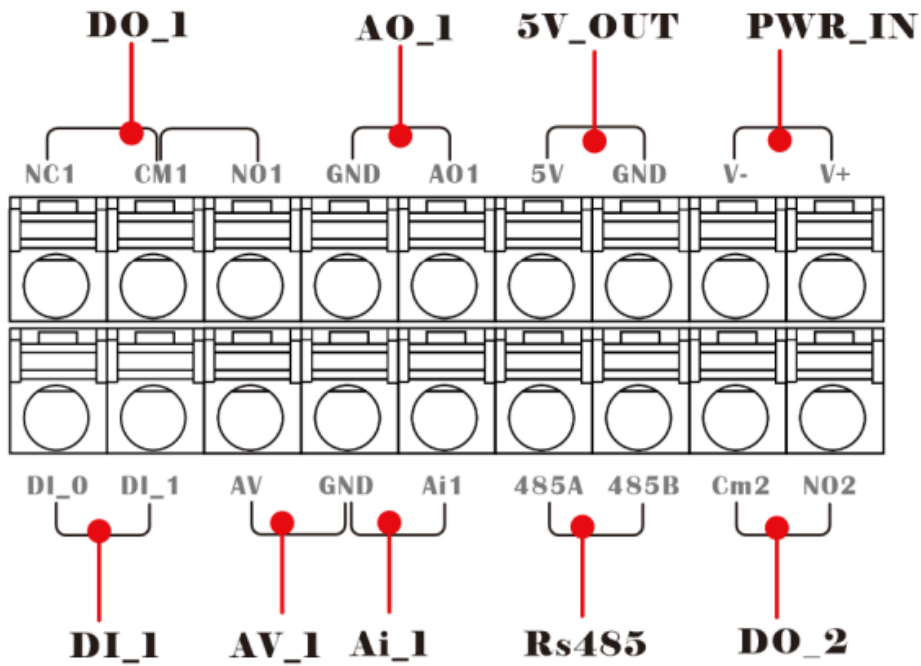


2. RS485 connection

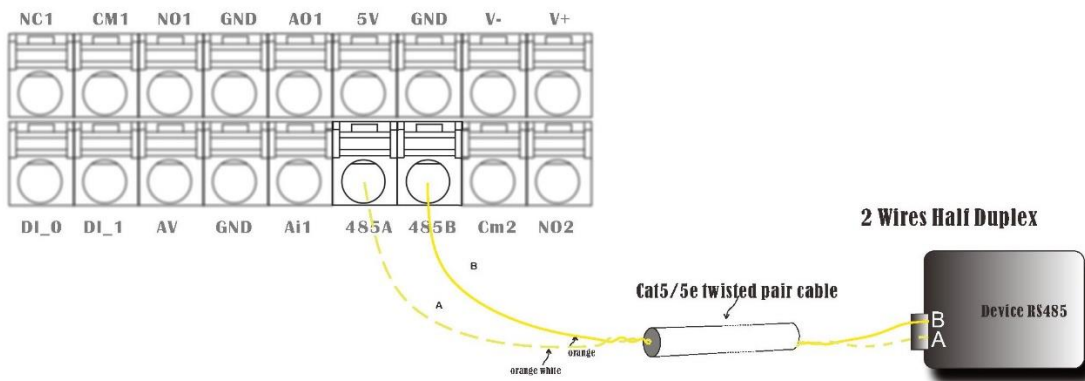


3. DO Connection

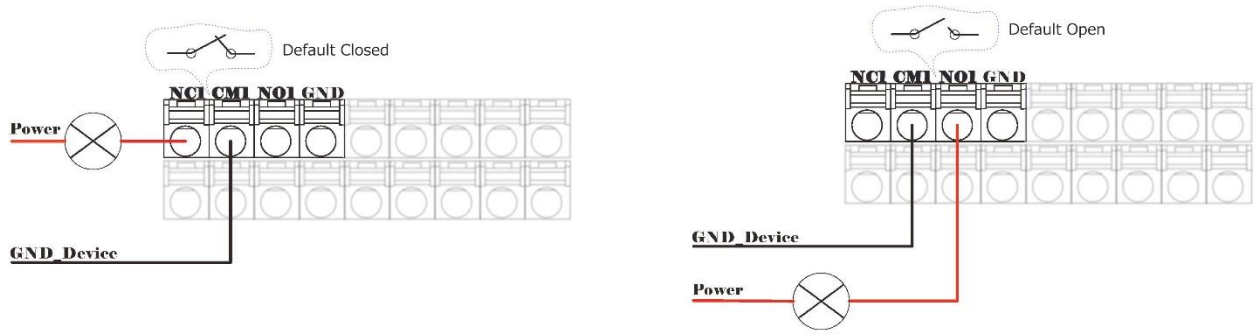


4. DO Connection (Signal Conversion)

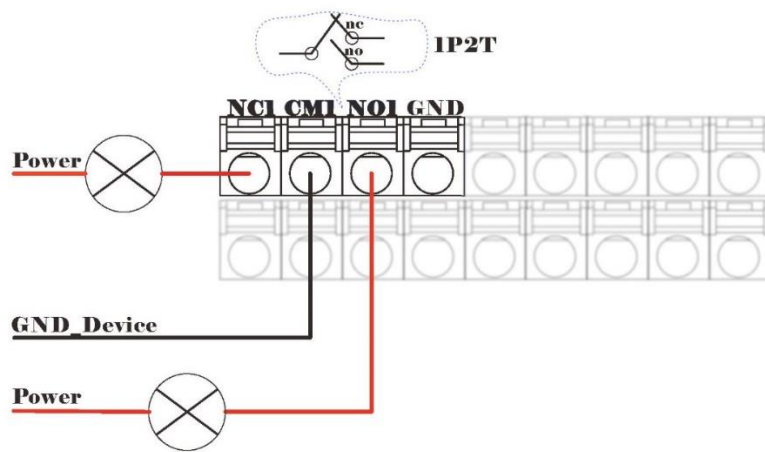


5. 5V power supply connection

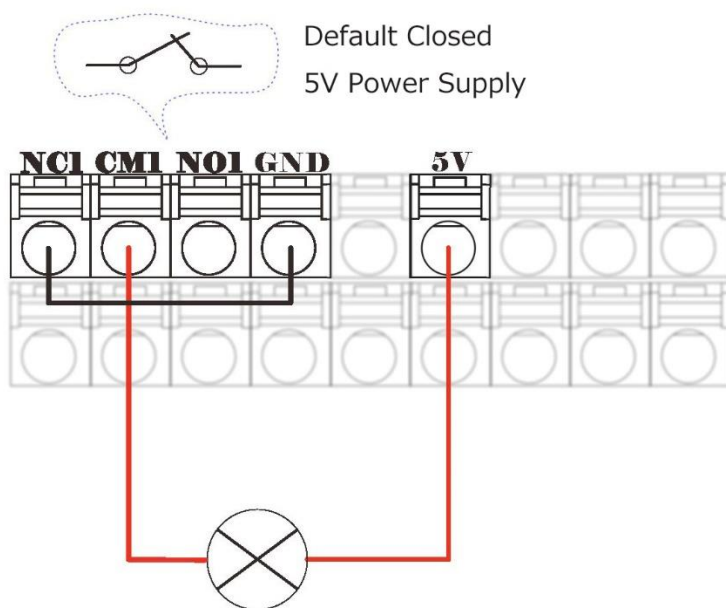


6. DI Connection

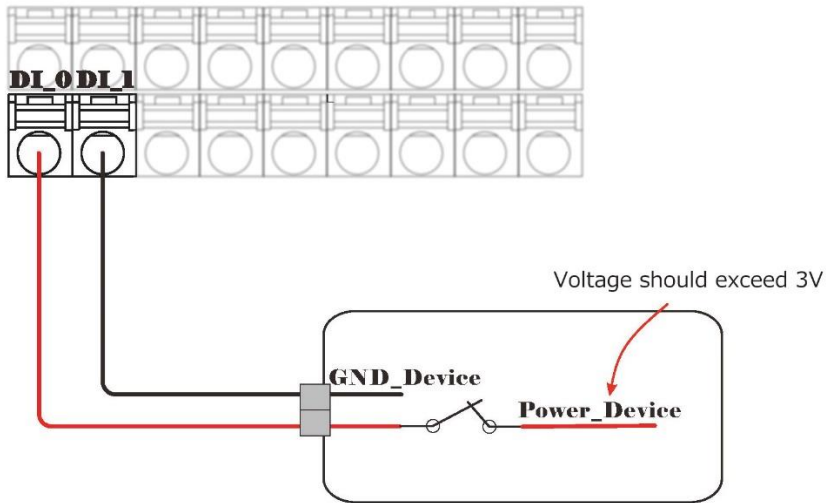


7. AO Connection

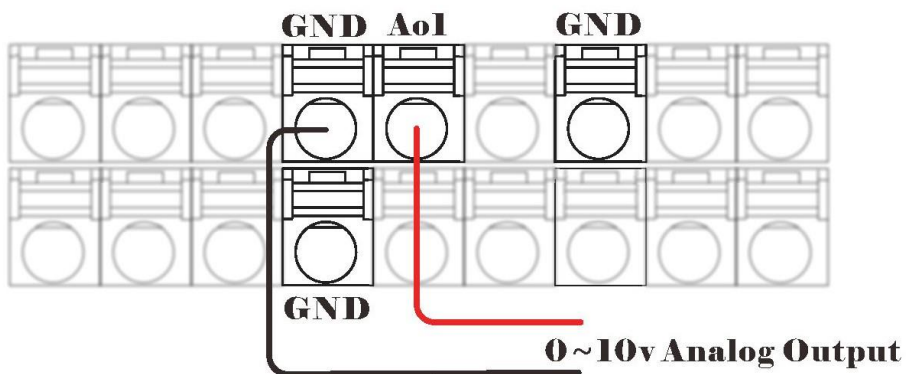

8. AI Connectivity

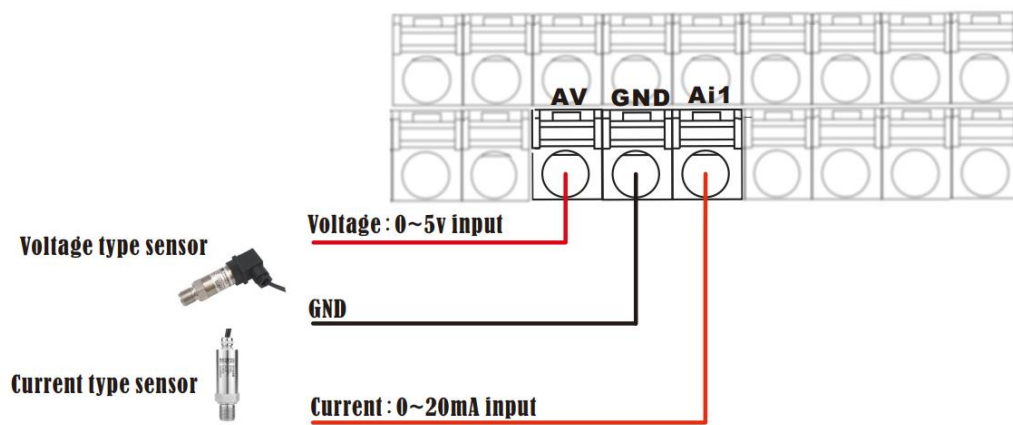

9. Wired power supply for this device

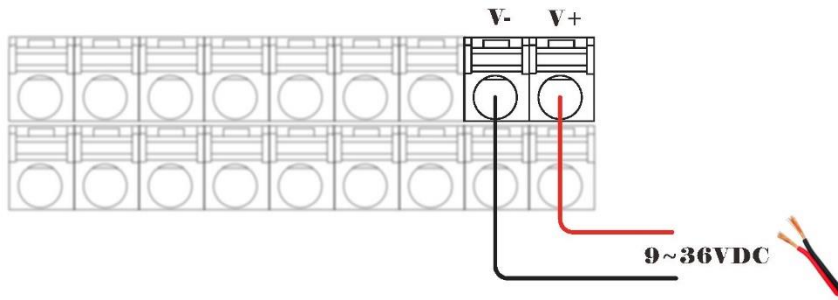

12. LoRaWAN

This chapter describes the procedures related to LoRa.

1. Standard LoRaWAN

1. Log in to the WebUI and select [IoT] from the main menu.
2. Select the following:

IoT > LoRaWAN

LoRaWAN

Hardware Status: **Started**

NS Connect status: **Connected**

Stop

Gateway ID: E47DEBffeBE1355

* Enable: Enabled

* Mode: LoRaWAN

Communication protocol: UDP

Config profile: Japan 920-923 MHz with LBT (channels 31-38)

* NS Server Address: au1.cloud.thethings.network

* NS Server Port Up: 1700

* NS Server Port Down: 1700

OK

- Gateway ID: Automatically created, unique identification ID for this gateway
- Enable: Enabled/Disabled
- Mode: Select LoRaWAN
- Communication Protocol: UDP fixed
- config profile: select a configuration file from the implemented template; Or customize for advanced settings
- NS Server Addr: Enter the address of the corresponding LoRaWAN server.
- NS Server Port Up: Enter the port number of the LoRaWAN server (1700 if using TTN)*
- NS Server Port Down: Enter the port number of the LoRaWAN server (1700 if using TTN)

*TTN stands for The Things Network

3. Click [OK].
4. Once the cloud is connected, NS Connect Status will be green [Connected]

2. LoRaWAN Network Server (LNS)

1. Log in to the WebUI and select [IoT] from the main menu.
2. Select the following:

The screenshot shows the LoRaWAN configuration interface. At the top, there are navigation tabs: IoT, Dashboard, Internet, Wireless, and System. Below the tabs, the breadcrumb is 'IoT > LoRaWAN'. The main heading is 'LoRaWAN'. Underneath, there are two status indicators: 'Hardware Status: Started' and 'NS Connect status: Connected'. A 'Stop' button is located in the top right corner. The configuration section includes the following fields:

- Gateway ID:** E47DEBfffeBE1355
- * Enable:** Enabled
- * Mode:** LNS
- * LNS-URI:** (empty text field)
- * LNS-KEY:** FILE (selected), Content. Includes a 'Load' button.
- * LNS-TRUST_CA:** FILE (selected), Content. Includes a 'Load' button.
- USER_CA:** FILE (selected), Content. Includes a 'Load' button.

An 'OK' button is located in the bottom right corner of the configuration area.

- Gateway ID: Automatically created, unique identification ID for this gateway
- Enable : Enabled/Disabled
- Mode: Select LNS
- LNS-URI: Enter the address of the LNS server.
- LNS-KEY: Load the corresponding file issued by the LNS server *
- LNS-TRUST_CA: Load the corresponding file issued by the LNS server.
- USER_CA: Load the corresponding file issued by the LNS server.

*Reference links for TTN users:

[LoRaWAN Network Server \(LNS\) | The Things Stack for LoRaWAN \(thethingsindustries.com\)](https://thethingsindustries.com/LoRaWAN-Network-Server-LNS/)

3. Click [OK].
4. Once the cloud is connected, NS Connect Status will be green [Connected]

3. Configuration and Update Server (CUPS)

1. Log in to the WebUI and select [IoT] from the main menu.
2. Select the following:

IoT > LoRaWAN

LoRaWAN

Hardware Status: Started

NS Connect status: Connected

Stop

Gateway ID:

* Enable:

* Mode:

* CUPS-URI:

* CUPS-KEY: FILE Content
 Load

* CUPS-TRUST_CA: FILE Content
 Load

USER_CA: FILE Content
 Load

OK

- Gateway ID: Automatically created, unique identification ID for this gateway
- Enable : Enabled/Disabled
- Mode: Select CUPS.
- CUPS-URI: Enter the address of the corresponding CUPS server.
- CUPS-KEY: LOAD THE CORRESPONDING FILE ISSUED BY THE CUPS SERVER *
- CUPS-TRUST_CA: Load the corresponding file issued by the CUPS server.
- USER_CA: Load the corresponding file issued by the CUPS server.

*Reference links for TTN users:

[Configuration and Update Server \(CUPS\) | The Things Stack for LoRaWAN \(thethingsindustries.com\)](https://thethingsindustries.com/configuration-and-update-server-cups/)

3. Click [OK].

4. Once the cloud is connected, NS Connect Status will be green [Connected]

13. EnOcean

This chapter describes the procedures related to EnOcean.

1. EnOcean Device Manager screen description

1. Log in to the WebUI and select [IoT] from the main menu.
2. Select [EnOcean] from the menu.

IoT > EnOcean

EnOcean Device Manager EnOcean Equipment

EnOcean Device Manager

Source of Data Internal External

Registered Devices *List of registered devices* Manually Register Device

Device Name	Device ID	EEP	EEP function	EEP Type	Data	RSSI	Operation
test	05005B76	A5-02-30	Temperature Sensors	10 Bit Temperature Sensor Range -40°C to +62.3°C	93 FA 55 0A	-58	UnRegister

Unregistered Devices *List of unregistered devices receiving* Show Only Teach Packets Clear Unregistered Devices

Device ID	Packet Type	Telegram Type	EEP	EEP function	EEP Type	Data	RSSI	Teach Data	Operation
0502DB21	Packet Type 10	4BS	Unknown	Unknown	Unknown	82 45 87 0E	-60	-	Register
04144135	Packet Type 10	VLD	Unknown	Unknown	Unknown	A8 22 C0 00 03 DB 1B 26 A0	-68	-	Register

3. Select Source of Data

- Internal: When receiving a sensor with EnOcean built-in this product (normal use)
- External: When using USB400J receiver

4. Check the screen display

Registered Devices: Registered sensors are displayed

Unregistered Device: Automatically searched sensors are displayed.

2. Register from the Unregistered Device list

* Register sensors from the auto searched sensor list

1. Click [Register] for the sensor you want to register with this product from the Unregistered Devices list.

Unregistered Devices Show Only Teach Packets Clear Unregistered Devices

Device ID	Packet Type	Telegram Type	EEP	EEP function	EEP Type	Data	RSSI	Teach Data	Operation
0502DB21	Packet Type 10	4BS	Unknown	Unknown	Unknown	7C 45 86 0E	-52	-	Register
04144135	Packet Type 10	VLD	Unknown	Unknown	Unknown	A7 21 80 00 03 DB 1A A6 E0	-68	-	Register

2. Enter the information into New EnOcean Devices window.

New EnOcean Devices X

EnOcean Device Name

EnOcean Device id

EnOcean RORG

EnOcean Function

EnOcean Type

OK Cancel

- EnOcean Device Name: Enter a name of your choice (up to 16 characters, alphanumeric)
- EnOcean Device id: Corresponding sensor ID (no need to change)
- EnOcean RORG: Select EEP-RORG of the corresponding sensor
- EnOcean Function: Select the EEP-Function of the corresponding sensor
- EnOcean Type: Select the EEP-Type of the corresponding sensor.

3. Click the [OK] button.
4. Sensor registered into Registered Devices list.

3. Register from Manually Register Device

* Register sensors those are not auto searched

1. Click the [Manually Register Device] button.



2. Enter the information into New EnOcean Devices window.

The screenshot shows a dialog box titled 'New EnOcean Devices' with a close button (X) in the top right corner. The dialog contains the following fields:

- EnOcean Device Name: An empty text input field.
- EnOcean Device id: A text input field containing the value '04144135'.
- EnOcean RORG: A dropdown menu with 'USR DEFINE' selected.
- EnOcean Function: A dropdown menu with 'USR DEFINE' selected.
- EnOcean Type: A dropdown menu with 'USR DEFINE' selected.

At the bottom of the dialog, there are two buttons: 'OK' and 'Cancel'.

- EnOcean Device Name: Enter a name of your choice (up to 16 characters, alphanumeric)
- EnOcean Device id: Enter the corresponding sensor ID
- EnOcean RORG: Select the EEP-RORG of the corresponding sensor
- EnOcean Function: Select the EEP-Function of the corresponding sensor
- EnOcean Type: Select the EEP-Type of the corresponding sensor

3. Click the [OK] button.

4. Sensor registered into Registered Devices list.

4. Register through Teach-in

*Get your Teach-in information and register

1. Press the LEARN button of the corresponding sensor.
2. When you receive the Teach Data, click [Register].

Unregistered Devices Show Only Teach Packets Clear Unregistered Devices

Device ID	Packet Type	Telegram Type	EEP	EEP function	EEP Type	Data	RSSI	Teach Data	Operation
04144135	Packet Type 10	VLD	D2-14-41	Multi Function Sensors	Indoor -Temperature, Humidity XYZ Acceleration, Illumination Sensor	9B D3 C0 00 2B EA FA D7 40 B0	-61	40 FF 0B 00 41 14 D2 C4	Register

3. Enter the information into New EnOcean Devices window.

New EnOcean Devices X

EnOcean Device Name

EnOcean Device id

EnOcean RORG
D2 - VLD Telegram ▼

EnOcean Function
14 - Multi Function Sensors ▼

EnOcean Type
41 - Indoor -Temperature, Hi ▼

OK
Cancel

- EnOcean Device Name: Enter a name of your choice (up to 16 characters, alphanumeric)
- EnOcean Device id: Corresponding sensor ID (no need to change)
- EnOcean RORG: EEP-RORG of the corresponding sensor (no change required)
- EnOcean Function: EEP-Function of the corresponding sensor (no change required)
- EnOcean Type: EEP-Type of the corresponding sensor (no change required)

4. Click the OK button.
5. Sensor registered into Registered Devices list.

5. EnOcean Equipment Screen Description

The sensor registered here will be the data sent to Cloud or Modbus TCP.

1. Log in to the WebUI and select [IoT] from the main menu.
2. Select [EnOcean] from the menu.
3. Click [EnOcean Equipment] from the menu.

IoT > EnOcean

EnOcean Device Manager EnOcean Equipment

EnOcean Equipment

01	Name	test		-
	temperature:	24.0°C		
	humidity:	33.0%		
	illumination:	15lx		
	accelerationStatus:	threshold1		
	accelerationX:	-0.005g		
	accelerationY:	0.025g		
	accelerationZ:	1.005g		
	contact:	open		
02	Name			+
03	Name			+
04	Name			+

6. Add registered sensor into EnOcean Equipment List

1. Press the [gear icon] on the right side of the number 01.
2. Select the sensor you want to add into EnOcean Equipment List from registered sensors.


EnOcean Equipment Configuration X

Input Device test

OK Cancel

3. Click [OK].

4.01 If you press [+] on the right side, you can check the details of the value received from the sensor.

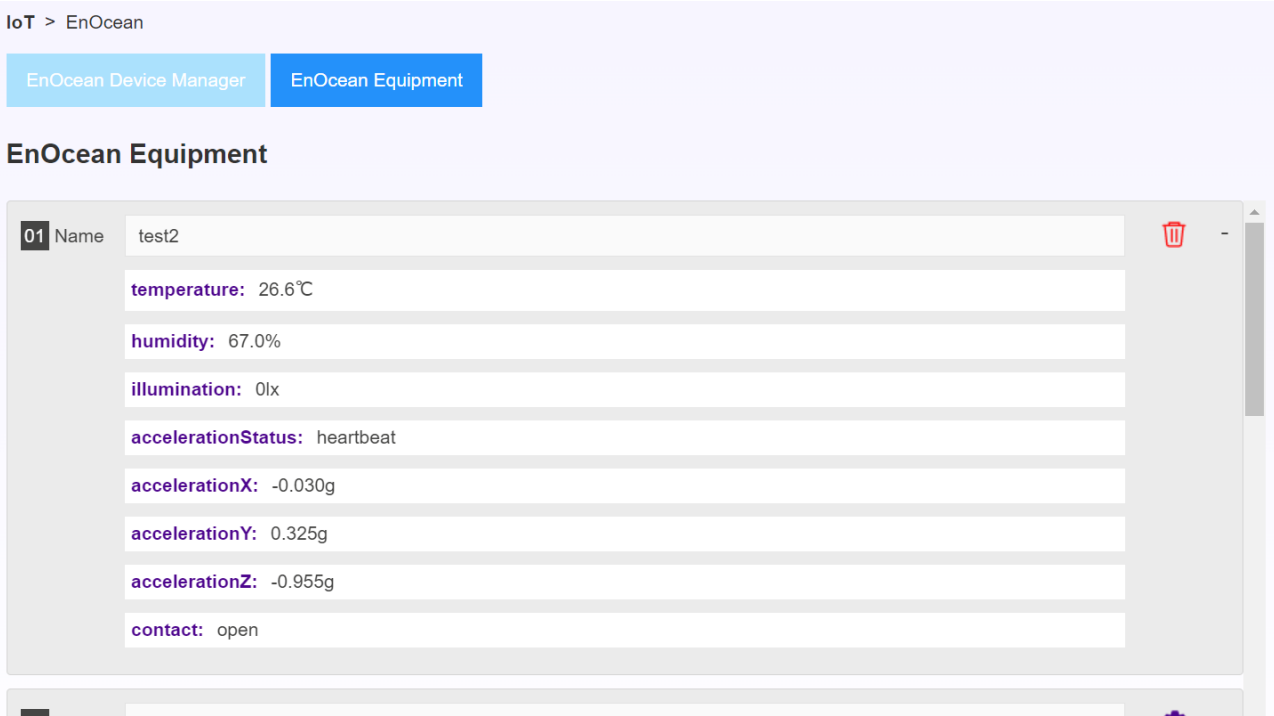

7. Delete registered sensor

1. Click the [Trash can icon] on the right side of EnOcean Equipment page.



2. Click [UnRegister] on the right side of the EnOcean Device Manager page.



3. The registered sensor is deleted.

8. List of supported EEPs

*List of EEPs that can be decoded

ROR G	ROR G	FUN C	FUNC NAME	TYP E	TYPE NAME	EEP Number
F6	RPS	02	Rocker Switch, 2 Rocker	04	Light and blind control ERP2	F60204
D5	1BS	00	Contacts and Switches	01	Single Input Contact	D50001
A5	4BS	02	Temperature Sensors	05	Temperature Sensor Range 0° C to +40° C	A50205
A5	4BS	02	Temperature Sensors	14	Temperature Sensor Range -20° C to +60° C	A50214
A5	4BS	02	Temperature Sensors	17	Temperature Sensor Range +10° C to +90° C	A50217
A5	4BS	02	Temperature Sensors	30	10 Bit Temperature Sensor Range -40° C to +62.3° C	A50230
A5	4BS	04	Temperature and Humidity Sensor	01	Range 0° C to +40° C and 0% to 100%	A50401
A5	4BS	04	Temperature and Humidity Sensor	02	Range -20° C to +60° C and 0% to 100%	A50402
A5	4BS	04	Temperature and Humidity Sensor	03	Range -20° C to +60° C 10bit-measurement and 0% to 100%	A50403
A5	4BS	06	Light Sensor	01	Range 300lx to 60.000lx	A50601
A5	4BS	06	Light Sensor	02	Range 0lx to 1.020lx	A50602
A5	4BS	06	Light Sensor	03	10-bit measurement (1-Lux resolution) with range 0lx to 1000lx	A50603
A5	4BS	07	Occupancy Sensor	01	Occupancy with Supply voltage monitor	A50701
A5	4BS	07	Occupancy Sensor	02	Occupancy with Supply voltage monitor	A50702
A5	4BS	07	Occupancy Sensor	03	Occupancy with Supply voltage monitor and 10-bit illumination measurement	A50703
A5	4BS	08	Light, Temperature and Occupancy Sensor	01	Range 0lx to 510lx, 0° C to +51° C and Occupancy Button	A50801
A5	4BS	08	Light, Temperature and Occupancy Sensor	02	Range 0lx to 1020lx, 0° C to +51° C and Occupancy Button	A50802

A5	4BS	08	Light, Temperature and Occupancy Sensor	03	Range 0lx to 1530lx, -30° C to +50° C and Occupancy Button	A50803
A5	4BS	09	Gas Sensor	04	CO2 Sensor	A50904
A5	4BS	10	Room Operating Panel	01	Temperature Sensor, Set Point, Fan Speed and Occupancy Control	A51001
A5	4BS	10	Room Operating Panel	03	Temperature Sensor, Set Point Control	A51003
A5	4BS	10	Room Operating Panel	04	Temperature Sensor, Set Point and Fan Speed Control	A51004
A5	4BS	10	Room Operating Panel	05	Temperature Sensor, Set Point and Occupancy Control	A51005
A5	4BS	10	Room Operating Panel	07	Temperature Sensor, Fan Speed Control	A51007
A5	4BS	10	Room Operating Panel	08	Temperature Sensor, Fan Speed and Occupancy Control	A51008
A5	4BS	10	Room Operating Panel	0C	Temperature Sensor and Occupancy Control	A5100C
A5	4BS	10	Room Operating Panel	10	Temperature and Humidity Sensor, Set Point and Occupancy Control	A51010
A5	4BS	10	Room Operating Panel	12	Temperature and Humidity Sensor and Set Point	A51012
A5	4BS	10	Room Operating Panel	13	Temperature and Humidity Sensor, Occupancy Control	A51013
A5	4BS	10	Room Operating Panel	19	Humidity, Temperature Set Point, Temperature Sensor, Fan Speed and Occupancy Control	A51019
A5	4BS	14	Multi-Func Sensor	05	Vibration/Tilt, Supply voltage monitor	A51405
A5	4BS	30	Digital Input	02	Single Input Contact	A53002
A5	4BS	30	Digital Input	05	Single Input Contact, Retransmission, Battery Monitor	A53005
D2	VLD	14	Multi Function Sensors	40	Indoor –Temperature, Humidity XYZ Acceleration, Illumination Sensor	D21440
D2	VLD	14	Multi Function Sensors	41	Indoor –Temperature, Humidity XYZ Acceleration, Illumination Sensor	D21441

9. List of Supported GPs

*List of GPs that can be decoded

Maker	Sensor Type	GP Number
Watty Inc.	2Wireless temperature sensor	HYHQ
	4 Wireless Temperature Sensors	HYHQ-FF
	Electronic Wet Bulb Black Bulb Temperature Wireless Sensor	WBGT_7500_E
DAISEN ELECTRONICS INDUSTRIAL	Temperature sensor	HYHQ

14. Modbus TCP

This chapter describes the procedures related to Modbus TCP.

1. Modbus TCP connection

1. Log in to the WebUI and select [IoT] from the main menu.
2. Select [Modbus TCP] from the menu.
3. Enter the following from [Modbus TCP Setting].

IoT > Modbus TCP

Modbus TCP Setting | Address Mapping List

Modbus TCP Setting

Data Source: ▼

Modbus TCP Switch: ▼

Host Mode: ▼

Host Address:

* Port:

-Data Source:

EnOcean / Modbus RTU

-Modbus TCP Switch: Enabled (to enable) / Disabled (to disable)

-Host Mode / Host Address

LAN(Gateway) / default gateway address

LAN(Static) / Ethernet static address

WAN(LTE) / cellular address

WAN (Wi-fi STA) / Wi-fi allocated address

WAN(DHCP/Static) / wired WAN address

-Port: 1502~1562

4. Select Save.

2. Modbus Address Map (EnOcean)

*When EnOcean is selected as data source

1. Log in to the WebUI and select [IoT] from the main menu.
2. Select [Modbus TCP] from the menu.
3. Select Address Mapping List.

Data Source	Address	Data	Equipment No	Channel	R/W
EnOcean	30001~30959	32bit float	1~24	1~20	R

4. Check the address map on the WebUI and make a request to the address specified by this product from the Modbus tool or server
 - . Example) Humidity data can be obtained by requesting TCP Address 30003.

IoT > Modbus TCP

Modbus TCP Setting | Address Mapping List

Address Mapping List

Toggle Sequence Nnumber: 1 : test2

Channel	Tag	Address	Data Type	Data
0	TMP10	30001	32b_float	25.500
1	NA	30002	NA	0.000
2	HUM	30003	32b_float	67.500
3	NA	30004	NA	0.000
4	ILL	30005	32b_float	0.000

3. Modbus Address Map (Modbus RTU)

*If Modbus RTU is selected in the data source

1. Log in to the WebUI and select [IoT] from the main menu.
2. Select [Modbus TCP] from the menu.
3. Select Address Mapping List.

Data Source	Address	Data	R/W
Modbus RTU	30001~31000	16bit float	R

4. Click the [Add] button.

Add Mapping
✕

Modbus RTU Slave ID

Modbus TCP Address

Modbus RTU Address

Data Type

Save
Cancel

*Modbus RTU equipment must be set up in advance.

4. Select the following

- Modbus RTU Slave ID: Modbus RTU Select the device set in
- Modbus TCP Address: Modbus TCP Select from address 30001~31000
- Modbus RTU Address: Select the address map of the device connected to Modbus RTU.
- Data Type: Select the data type

5. Click the [Save] button.

6. Check the address map on the WebUI and make a request to the address specified by the product from the Modbus tool or server.

Example) If you request TCP Address30001, you can get RTU Address0200 data.

IoT > Modbus TCP

Modbus TCP Setting
Address Mapping List

Address Mapping List

Add

Modbus RTU Slave ID	Modbus TCP Address	Modbus RTU Address	Data Type	Data	Operation
1	30001	0200	16b_float	1040.000	Edit Del

15. FTP/SFTP

This chapter describes FTP/SFTP-related procedures.

1. FTP Upload

- * Upload CSV file converted from RS485/232.
- * Compatible devices: OMRON's KM-N1-FLK

1. Log in to the WebUI and select [IoT] from the main menu.
2. Select [FTP/SFTP] from the menu.
3. Select [FTP Upload].
4. Configure the following settings.

IoT > FTP/SFTP

FTP Upload | FTP Gather | Un_upload List

FTP Upload

Enable This Connection:

Type: FTP

* Server:

* Port: 21

Mode: PORT Mode

* User Name:

* Password:

* Interval Time: s

File Prefix:

OK

Enable This Connection: Check if you want to use it.

-Type: Select FTP/SFTP

-Server: Enter the IP address of the upload destination.

-Port: Fixed value by selecting Type (no change required)

-User Name: Enter the user name of the upload destination

-Password: Enter the password of the upload destination

-Interval Time: Set the upload interval

-File Prefix: Name of the output folder (initial)

5. Click OK.

2. FTP Gather

* Ability to retrieve files from subordinate devices.

*Compatible devices: OMRON's KM-D1-ETN

1. Log in to the WebUI and select [IoT] from the main menu.

2. Select [FTP/SFTP] from the menu.

3. Select [FTP Gather].

4. Configure the following settings.

IoT > FTP/SFTP

FTP Upload FTP Gather

FTP Gather

Enable Gather Func:

Server: 192.168.1.222

Port: 21

User Name: ftp

Password: ***

Dev-Type: KM-D1-ETN

Method: Manual

Date-range: 2023-06-06 to 2023-06-07

DownLoad OK

-Enable This Connection: Check if you want to use it.

-Server: Enter the IP address of the subordinate, device.

-Port: Specify the port

-User Name: User name of the subordinate device

-Password: Password name of the subordinate device

• Dev-Type: KM-D1-ETN (cannot be changed / other devices will be supported)

• Method: Manual/Auto

-Data-range: Target period of the CSV you want to obtain


5. Click [Download]

6. CSV for the target period is saved in the product.


3. Un_upload List

* Function to check the list of CSV files saved in this product.

1. Log in to the WebUI and select [IoT] from the main menu.
2. Select [FTP/SFTP] from the menu.
3. Select [Un_upload List].

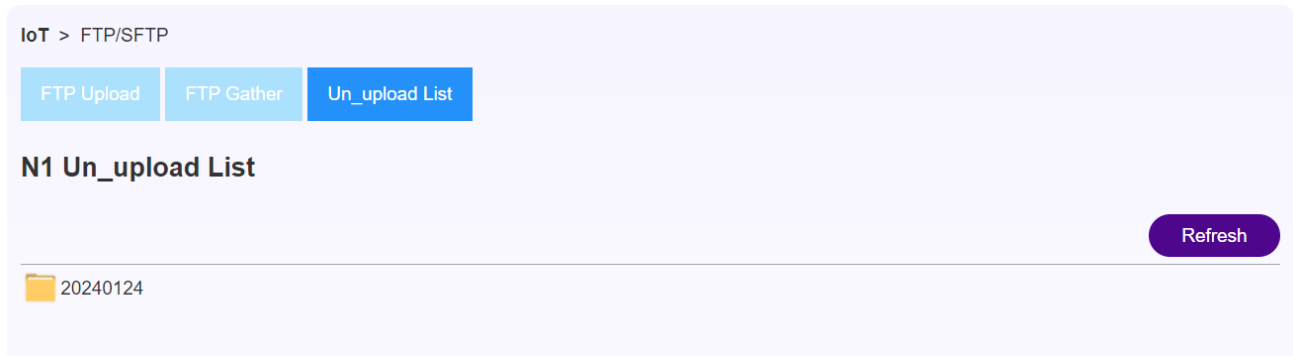

4. Select a folder for the date.

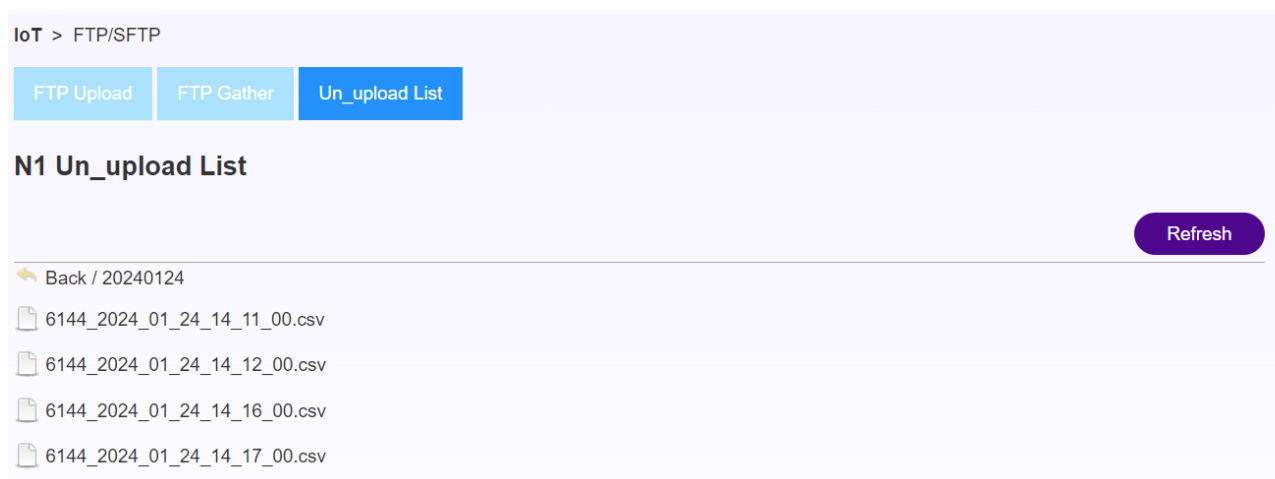

* CSV files are saved by creating folders for each date.

* Files that have been successfully uploaded will be deleted.

* CSV files are stored for up to 7 days and deleted in folders at 23:59 on the 7th day.

16. MQTT

This chapter describes the procedures related to MQTT.

1. Log in to the WebUI and select [IoT] from the main menu.
2. Select [MQTT] from the menu.

Index	Enable	Name	Client id	Host	Port	Connection status	Start/Stop
1	Disabled	-	-	-	-	-	-
2	Disabled	-	-	-	-	-	-
3	Disabled	-	-	-	-	-	-
4	Disabled	-	-	-	-	-	-

3. Select any number in the index.
*4 MQTTs can be used at the same time
4. Select any number in the index.

MQTT List

Index	Enable	Name	Client id	Host	Port	Connection status	Start/Stop
1	Disabled	-	-	-	-	-	-
2	Disabled	-	-	-	-	-	-
3	Disabled	-	-	-	-	-	-
4	Disabled	-	-	-	-	-	-

General Settings

Index:

Enable:

Save

-Enabled: Enabled (if enabled)/Disable (If you want to disable it)

5. Click the [OK] button.
6. Enter the following:

General Settings

Index	<input type="text" value="1"/>
Enable	<input type="text" value="Enabled"/>
* Name	<input type="text" value="zf1"/>
* Client id	<input type="text" value="1"/>
* Host	<input type="text" value="broker.hivemq.com"/>
* Port	<input type="text" value="8883"/>
User name	<input type="text"/>
Password	<input type="password"/>

- Name: Arbitrary name
- Client id: Any ID
- Host: Destination host address
- Port: PORT number (MQTT:1883/MQTTS:8883)

7. If you are using MQTTS, set TLS to Enabled and select a certificate.

TLS	<input type="text" value="Enabled"/>
* CA File:	<input type="text" value="ssl_cafile.pem"/> <input type="button" value="Load"/> Upload successful
Cert File:	<input type="text" value="ssl_certfile.pem"/> <input type="button" value="Load"/> Upload successful
Key File:	<input type="text" value="ssl_keyfile.pem"/> <input type="button" value="Load"/> Upload successful
* Timeout	<input type="text" value="10"/> s
* Keep alive	<input type="text" value="60"/> s
Version	<input type="text" value="V5.0"/>
LWT Topic	<input type="text"/>
LWT Qos	<input type="text" value="1"/>
LWT Retain	<input type="text" value="Disabled"/>
LWT Payload	<input type="text"/>

8. Click the [Save] button.

9. Verified that the Connection status is "Connected".

IoT > MQTT

MQTT List

Index	Enable	Name	Client id	Host	Port	Connection status	Start/Stop
1	Enabled	test	test	54.165.198.210	1883	Connected	Stop
2	Disabled	-	-	-	-	-	-
3	Disabled	-	-	-	-	-	-
4	Disabled	-	-	-	-	-	-

10. Configure the data source and publishing.

Data Collection:

Pub Data: Data Payload Serial EnOcean

Data Format: JSON

Pub Topic:

Pub Qos:

Pub Retain:

Pub Type: Processed Data Raw Data

Pub Mode:

Pub Interval: s

Save

-Data Collection : Enabled/Disable

-Pub Data : Data Payload (for verification) / Serial / EnOcean:

-Data Format : JSON

-Pub Topic: Enter the topic name

-Pub QoS: Select the message assurance level.

-Pub Retain: Enabled for the Retain function/Select Disable.

-Pub Type :

-Processed Data: Telegram parsed data

-Row Data: Unparsed Telegram data

-Pub Mode :

-Periodic reporting: Time interval report

-Real-time reporting: Real time reporting latest data from sensors

-Pub Interval: Enter the transmission interval (Input is available only when Periodic reporting is selected.)

11. Click the [Save] button.

17. Cloud Service

This chapter describes Cloud-related procedures.

4. Connect to AWS

- Log in to the WebUI and select [IoT] from the main menu.
- Click [AWS] from the menu.
- Enter the following:

IoT > AWS

AWS

Connection status: Connected Stop

Enable: Disabled Enabled

* Source of data: Serial EnOcean

* Data Format: Json

* Host:

* Port Number:

User Name:

Password:

* CA File: Load

* Cert File: Load

* Key File: Load

Reporting method:

* Topic:

* EnOcean Data mode: Processed Data Raw Data

Additional Json Message:

OK

- Source of data: Select the data sent from EnOcean / Serial.
- Data Format: JSON
- Enable This Connection: Check to start a connection to AWS.
- Host: Enter the AWS endpoint.
- Port Number:8883

- CA File: Select the certificate and press [Load]
- Cert File: Select the certificate file and press [Load]
- Key File: Select the private key file and press [Load]
- Reporting method: Select the communication timing from the following.
 - Periodic reporting: Time interval report
 - Real-time reporting: Real time reporting latest data from sensors
- Interval Time: Enter the transmission interval (can only be entered if Periodic reporting is selected)
- Topic: Enter the topic name of the MQTT
- EnOcean Data Mode:
 - Processed Data: Telegram parsed data
 - Row Data: Unparsed Telegram data
- Additional Json Message : Enter if there is a sentence you want to add to the JSON.
 - *Example)"reciever_type" : "500J",
 - *Please enter according to JSON format.

4. Click [OK].

5. Connect to Azure

1. Log in to the WebUI and select [IoT] from the main menu.
2. Click [AWS] from the menu.
3. Enter the following:

The screenshot shows the 'IoT > Azure' configuration page. The 'Connection status' is 'Disconnected'. The 'Enable' dropdown is set to 'Enabled'. Under 'Source of data', 'EnOcean' is selected. Under 'Data Format', 'Json' is selected. There are input fields for 'Host Name', 'Device ID', and 'Shared Access Key'. The 'Reporting method' dropdown is set to 'Periodic reporting'. The 'Interval Time' field is empty with a 's' unit indicator. Under 'EnOcean Data mode', 'Processed Data' is selected. There is a text area for 'Additional Json Message'. An 'OK' button is located at the bottom right of the form.


- Enable This Connection: Check to start a connection to Azure.
- Host Name:
Enter your Azure host name - Enter your Device ID: Device ID
- Shared Access Key: Set the access key
- Reporting method: Select the communication timing from the following.
 - Periodic reporting: Time interval report
 - Real-time reporting: Real time reporting latest data from sensors
- Interval Time: Enter the transmission interval (can only be entered if Periodic reporting is selected)
- Topic: Enter the topic name of the MQTT
- EnOcean Data Mode:
 - Processed Data: Telegram parsed data
 - Row Data: Unparsed Telegram data
- Additional Json Message : Enter if there is a sentence you want to add to the JSON.
 - *Example)"receiver_type" : "500J",
 - *Please enter according to JSON format.

4. Click [OK].

18. Software Updates

This chapter describes the procedure for updating the software.

1. Log in to the WebUI and select [System] from the main menu.
2. Select [Firmware Upgrade] from the side menu.
3. Select [Browse] and select the update file (~.bin) to be provided separately.
4. Select [Upgrade].

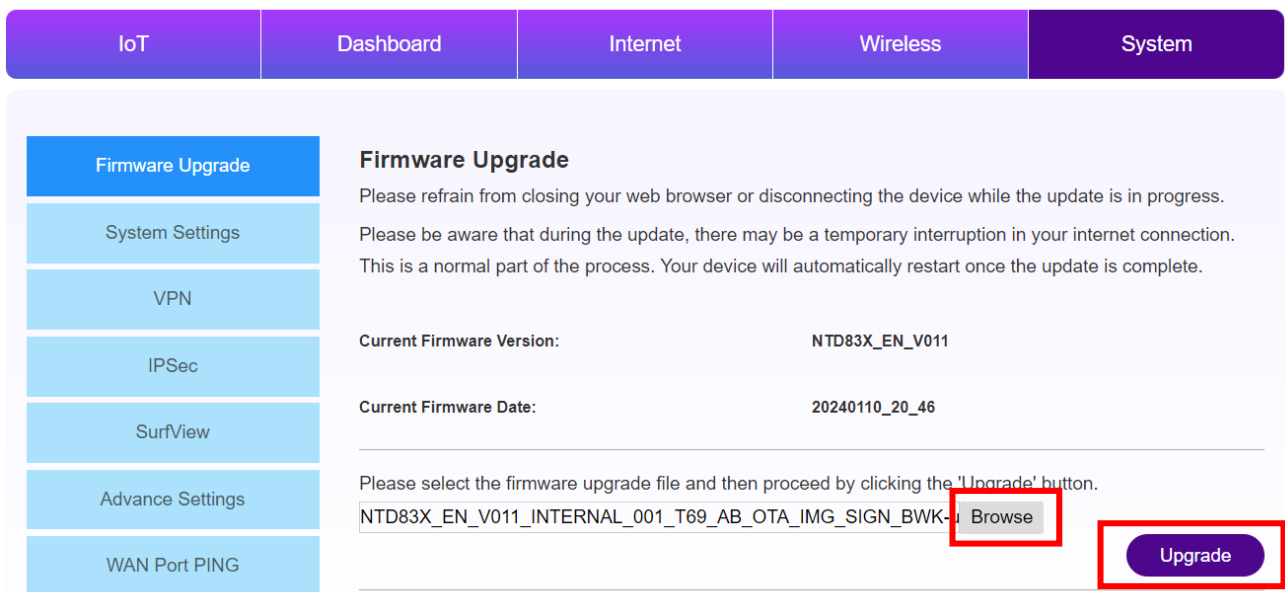


5. A progress bar pop-up is displayed, and the application restarts when the progress reaches 100%.
6. The update is complete.

* Do not unplug the power during the update.

19. Network Interface

This chapter describes the Network Interface.

SurfGate Interface Details

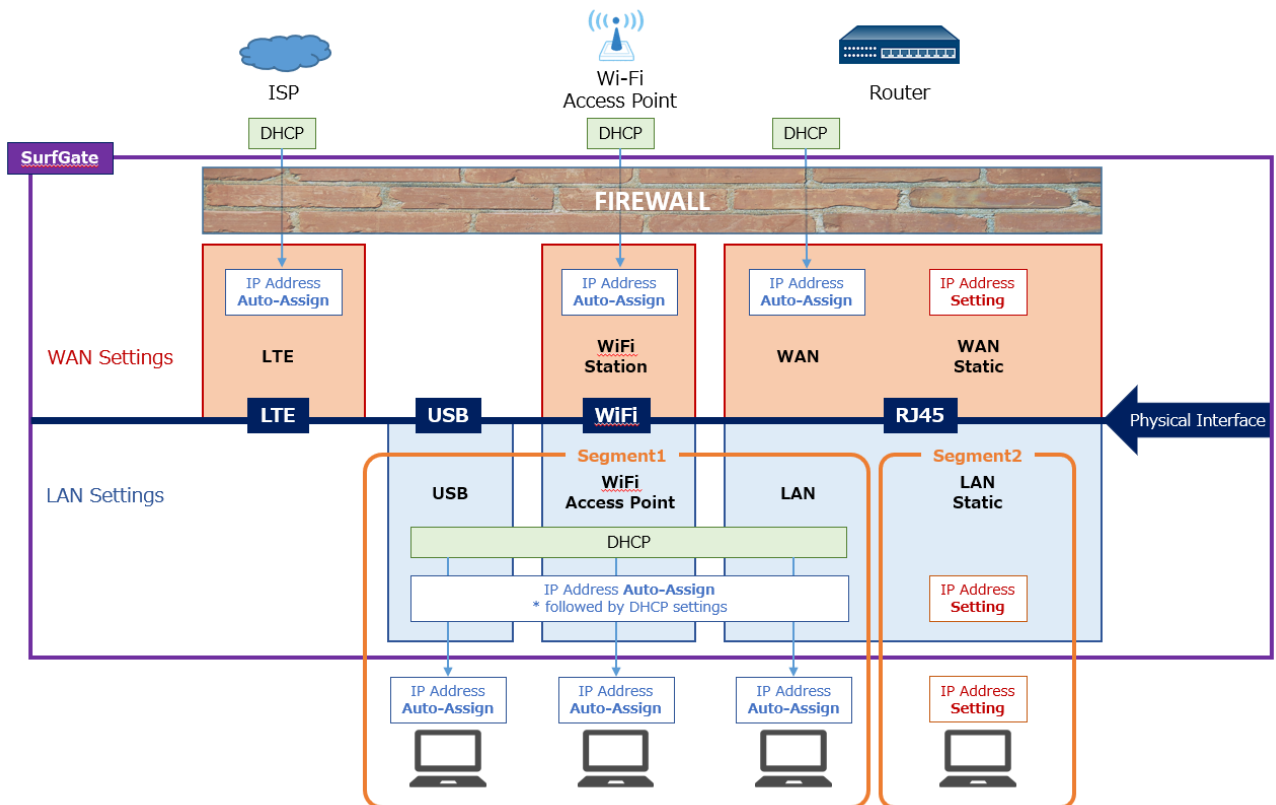

Each physical interface operates in one role.

The firewall policy applies to inbound communication for WAN.

LAN (DHCP), WiFi, and USB are accepted on the same logical interface.

WAN interface is registered as the default gateway. (Priority metric: RJ45 > Wi-Fi > LTE)

20. Revision History

This chapter provides a history of revisions.

The manual revision symbol is appended to the end of the catalog number on the front cover.

Catalog Number: NTD83Y -User□

↑ Revision symbol

Revision symbol	Date of revision	Revised page
A	September 2023	first edition
B	October 2023	Modified product specification chapter EnOcean
C	October 2023	EnOcean 章に対応 EEP の追加
D	October 2023	Adding MQTTS into MQTT chapter Adding LoRaWAN chapter
And	October 2023	Adding IPSec to the VPN chapter
F	November 2023	Adding Ethernet Management, Network Interface chapter
G	January 2024	Adding FTP/SFTP chapter
H	March 2024	Adding Remote I/O chapter
I	April 2024	Updated the list of supported EEPs and GPs in the EnOcean chapter.

21. Information

We do not guarantee our products when they are used under conditions or environments not described in this magazine, or when they are used for applications that require particular safety, such as when they are expected to have a significant impact on human life or property, unless there is a special agreement intended by the Company.

Inquiries about products
SyncWave Inc.
E-mail: info@syncwave.jp / Website: <https://syncwave.jp/>

Catalog Number:NTD83Y -UserI As of April 202 4